

## Adjusting the Earphone Volume

### To adjust the earphone volume during a call:

1. With the Bluetooth headset paired and connected, press the volume key (+) on the Bluetooth headset to increase the volume.
2. With the Bluetooth headset paired and connected, press the volume key (-) on the Bluetooth headset to decrease the volume.

## Ending Calls

### To end a call:

1. With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to end a call.

## Troubleshooting

### Why does the phone not find the Bluetooth headset?

- Ensure the Bluetooth headset is turned on.
- Ensure the Bluetooth headset is in pairing mode when the phone is searching for Bluetooth headsets.

### Why noises in the Bluetooth headset?

- Check the battery level. If the battery level is low, charge the Bluetooth headset.
- Ensure the Bluetooth headset and the phone are within the working range of 10 meters (32 feet) and there is no obvious interference (walls, doors, etc) between them.

 


# Bluetooth USB Dongle BT40 User Guide


This Bluetooth USB dongle BT40 adds connectivity to Yealink phones (Bluetooth-enabled) with a wide variety of Bluetooth Headsets, compatible with Bluetooth specification V4.0 and backwards compatible with 1.1, 1.2, 2.0 and 3.0.

## Packaging Contents

The following items are included in your package. If you find anything missing, contact your system administrator.

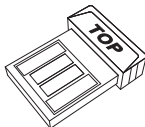


USB Dongle

 

User Guide

## Assembling the USB Dongle

 Assemble the USB dongle, as shown below:

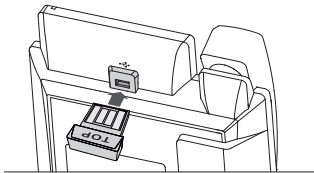

To assemble the USB dongle:

1. Insert the USB dongle with “TOP” facing upwards into the USB port on the back of the phone.

## Pairing and Connecting the Bluetooth Headset with a Phone

To pair and connect the Bluetooth headset with a phone:

1. Turn on the Bluetooth headset.
2. Assemble the USB dongle.
3. Long press the multifunction key on the Bluetooth headset until the indicator LED alternately flashes red and blue. The Bluetooth headset is in pairing mode.
4. Activate the Bluetooth feature on the phone. Refer to the user guide of the phone to activate the Bluetooth feature.

5. Select Scan on the phone.

The phone starts searching for Bluetooth headsets within the working range of 10 meters (32 feet) and displays all detected Bluetooth headsets.

6. Select the desired one from the list of found Bluetooth headsets on the phone.
7. If needed, enter the PIN 0000 or 1234 to pair and connect the headset with the phone.

If the Bluetooth headset is connected with the phone successfully, the headset beeps and appears in the phone menu where you can view the currently paired Bluetooth headset.

**Note:** The USB dongle provided by Yealink supports hot plug. You can unplug and plug the USB dongle without rebooting the phone to research for Bluetooth headsets within the range.

## Answering Calls

To answer an incoming call:

1. With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to answer an incoming call.

If there is already an active call on the phone, the original call is placed on hold after answering the new incoming call.