



CONFIGURAÇÃO REALTONE WSS60-8S/8

Acessando o Realtone WSS60-8S/8:

Conectado ao PC digite no navegador o endereço 192.168.2.218

Senha: voip

A screenshot of the VoIP Gateway login page. The page has a light blue background. In the top right corner, there are two links: '中文' and 'English'. The main heading is 'VoIP Gateway' in a large, bold, blue font. Below the heading, there is a 'User' field with a dropdown menu showing 'Admin'. Below that is a 'Password' field with an empty text input box. To the right of the password field is a blue 'Login' button. The entire screenshot is overlaid on a background of a hand holding a pen, rendered in a low-poly, geometric style.


Lojamundi – CNPJ: 17.869.444/0001-60

Av. Paranoá Qd. 09 conj. 01 lote 01 sala 304, Paranoá DF CEP: 71.571-012

www.lojamundi.com.br

Em Basic - Configure um IP da sua rede. Todos os equipamentos envolvidos devem estar na mesma rede.


Time Zone: Selecione (GMT -03:00) Buenos_Aires

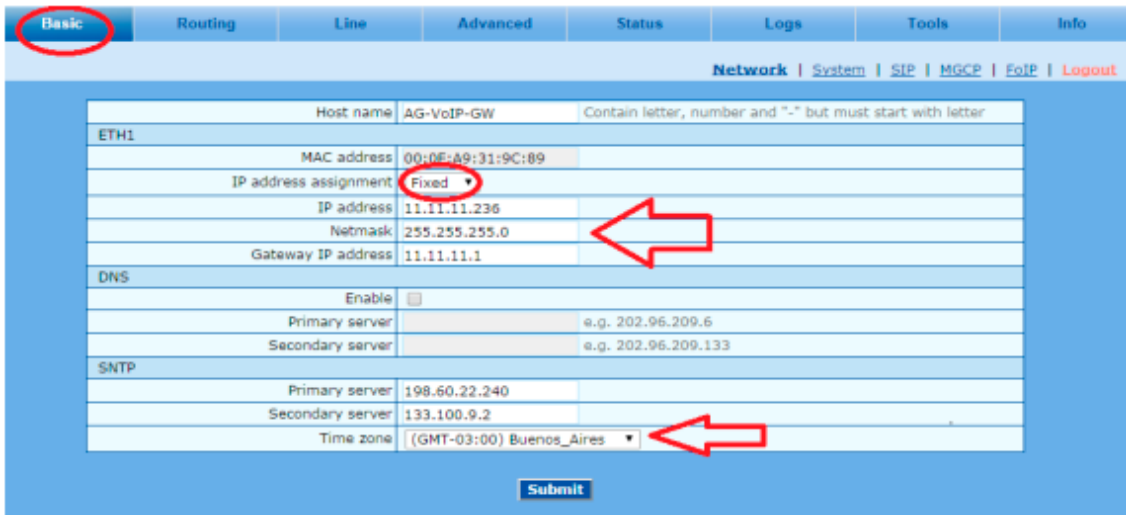

Host name		AG-VoIP-GW	Contain letter, number and "-" but must start with letter
ETH1			
MAC address	00-0E-A9:31:9C:89		
IP address assignment	Fixed		
IP address	11.11.11.236		
Netmask	255.255.255.0		
Gateway IP address	11.11.11.1		
DNS			
Enable	<input type="checkbox"/>		
Primary server	e.g. 202.96.209.6		
Secondary server	e.g. 202.96.209.133		
SNTP			
Primary server	198.60.22.240		
Secondary server	133.100.9.2		
Time zone	(GMT-03:00) Buenos_Aires		

Submit

Em Basic > SIP, registre o Gateway Realtone WSS60 ao servidor de telefonia

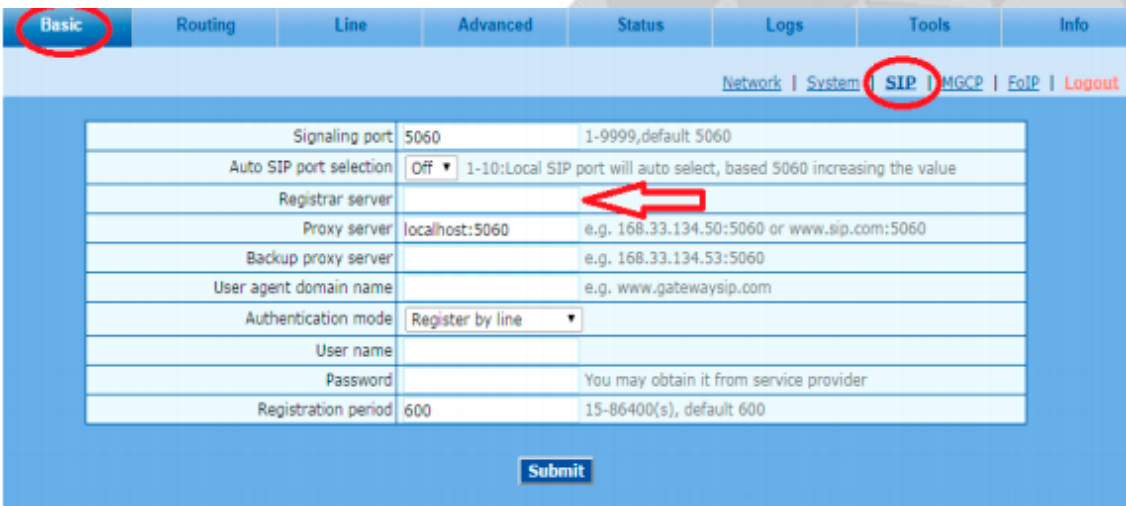

Signaling port		5060	1-9999,default 5060
Auto SIP port selection	Off 1-10:Local SIP port will auto select, based 5060 increasing the value		
Registrar server			
Proxy server	localhost:5060 e.g. 168.33.134.50:5060 or www.sip.com:5060		
Backup proxy server	e.g. 168.33.134.53:5060		
User agent domain name	e.g. www.gatewaysip.com		
Authentication mode	Register by line		
User name			
Password	You may obtain it from service provider		
Registration period	600 15-86400(s), default 600		

Submit

Em Line > Trunk Crie os troncos FXO

Trunk ID: Seleccione a FXO


Phone number: Seleccione a conta SIP

Password:***** (Digite a senha da conta SIP)

Inbound handle: Seleccione Binding

Binding number: Seleccione a conta SIP

Seleccione Caller ID detection

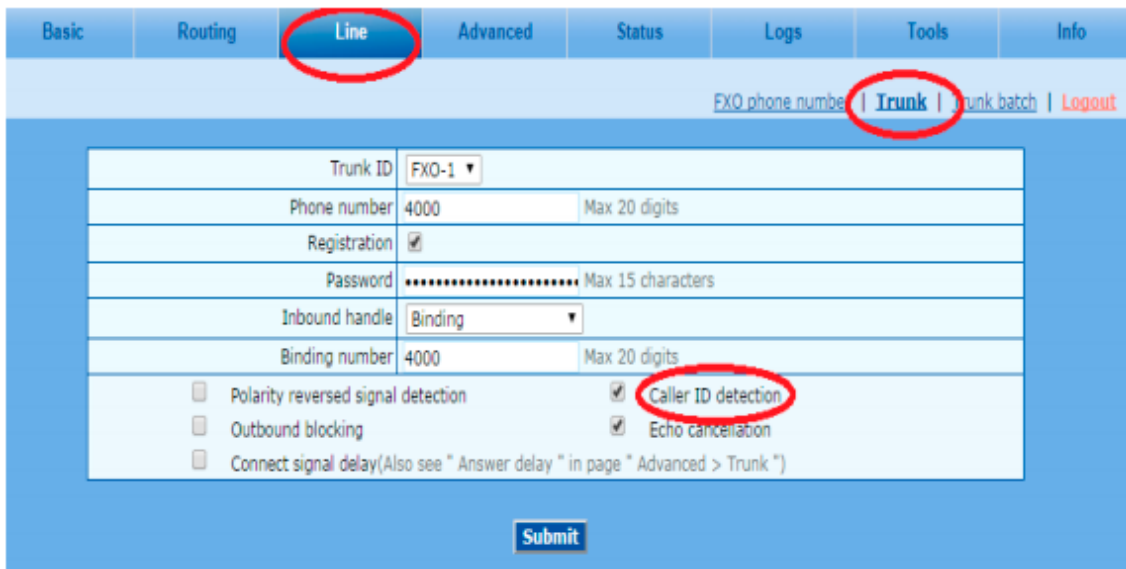

Basic	Routing	Line	Advanced	Status	Logs	Tools	Info
FXO phone number Trunk Trunk batch Logout							
Trunk ID	FXO-1						
Phone number	4000	Max 20 digits					
Registration	<input checked="" type="checkbox"/>						
Password	Max 15 characters					
Inbound handle	Binding						
Binding number	4000	Max 20 digits					
<input type="checkbox"/> Polarity reversed signal detection	<input checked="" type="checkbox"/> Caller ID detection						
<input type="checkbox"/> Outbound blocking	<input checked="" type="checkbox"/> Echo cancellation						
<input type="checkbox"/> Connect signal delay(Also see " Answer delay " in page " Advanced > Trunk ")							
<input type="button" value="Submit"/>							