



EXP38 User Manual

© 2009 Yealink Network Technology Co. Ltd.

All rights reserved.

Version 4.1.0

www.yealink.com

About This Guide

This Expansion Module EXP38 is designed for connection of the Yealink Enterprise IP Phone T28P/T26P VoIP phone. In the following sections, we will take T28P to make a brief description.

© 2009 Yealink Network Technology Co. Ltd.

All Rights reserved. This document is supplied by Yealink Network Technology Co. Ltd. No part of this document may be reproduced, republished or retransmitted in any form or by any means whatsoever, whether electronically or mechanically, including, but not limited to, by way of photocopying, recording, information recording or through retrieval systems, without the express written permission of Yealink Network Technology Co. Ltd.

Yealink Network Technology Co. Ltd reserves the right to revise this document and make changes at any time and without the obligation to notify any person and/or entity of such revisions and/or changes.

Tables of Contents

Connection.....	1
Connect to the Phone	1
Connect to the next module.....	2
Connect the cords	3
Configuration	4
BLF	5
Speed Dial	6
Intercom	7
URL.....	8
Share Line	9
Conference	10
Forward	11
Transfer	12
Hold.....	13
DND	14
Redial	15
Call Return	16
Group Pickup.....	17
Call Park	18
Group Listening	19
SMS.....	20
Voicemail.....	21
Custom	22
Public Hold	23
Private Hold	24

Connection

Please refer to the following sections to install the EXP38.

Before the installation, please unplug the power connector and the phone stand from the Yealink IP phone T28P. Then place the telephone and the expansion module upside down on a soft surface so that you can read nameplates from the front. The expansion module must be placed to the left of the telephone.

Connect to the Phone

Use the connecting sheet and screw to connect the EXP38 to the IP phone. Shown as:




Your phone and the expansion module will be connected as the following picture shows:



Connect to the next module

Follow the same step to connect the next expansion module:

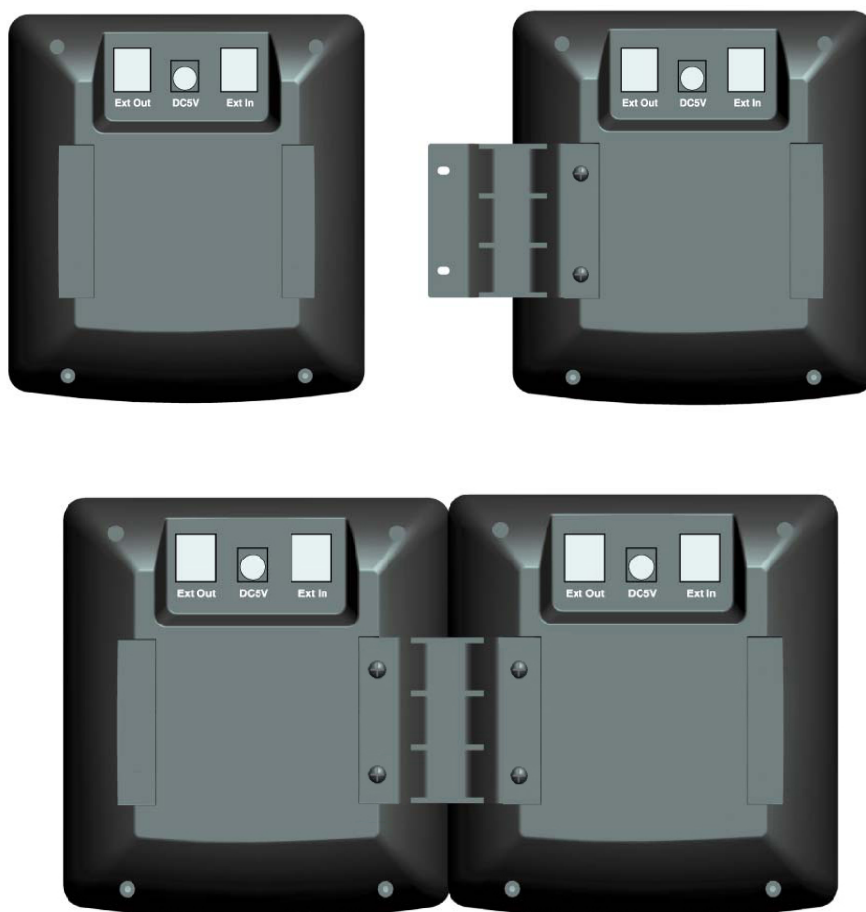


After the installation, it will be shown as:

**Note:**

Our IP phone T28P can support six expansion modules at most. But if you use more than three expansion modules, you need to connect an additional power adapter to anyone of the expansion modules.

Connect the cords

Plug the connecting cord into the Ext jack of the IP phone, the next port to the Ext in jack of the first module; If you want to connect more than one module, then go on to plug another cord into the Ext out jack, and the other port to the Ext in jack of the second module. Shown as the following picture:

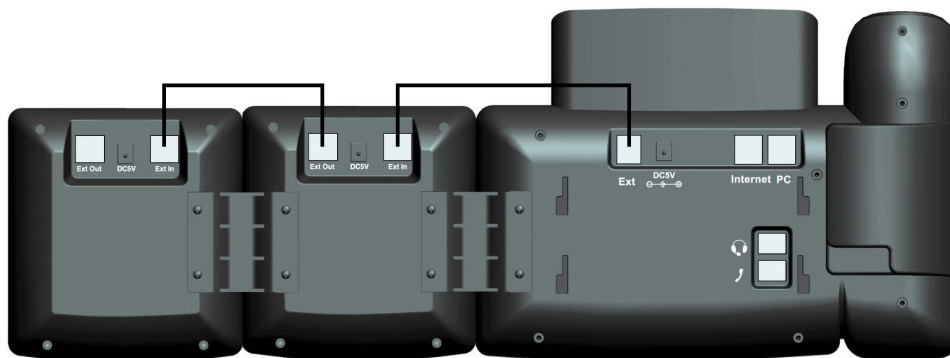**Note:**

Users can connect six modules at most. Connect the Ext in port of the previous module and the Ext out port of the next module with an connecting cord will be ok.

Then attach the stand and the power adapter, connect handset and headset to use.

Configuration

The expansion module EXP38 has 38 programmable keys which are able to set up to 17 functions per key. You can use the web interface or the IP phone user interface to configure key functions. Pressing the special key of the EXP38 you want to set for about 5 seconds, the IP phone will turn out the user setting interface of this key, then you can make desired configuration to this key by the IP phone interface. In the following sections, we will make detail description of setting by the web interface.

The following list shows the functions you can set on the programmable keys and provides a description for each function. The default configuration for each key is N/A which means the key hasn't been set for any functions.

- N/A
- BLF(Busy Lamp Field)
- Speed Dial
- Intercom
- URL
- Share Line
- Conference
- Forward
- Transfer
- Hold
- DND
- Redial
- Call Return
- Group Pickup
- Call Park
- Group Listening
- SMS
- Voicemail
- Custom
- Public Hold
- Private Hold


Note:

Quick access features like Intercom and Voicemail must first be configured on your PBX in order to work on your phone. See your system administrator for more information.

BLF

You can configure the key for Busy Lamp Field (BLF) use which allows you to monitor the status (idle, ringing, or busy) of other SIP accounts. User can dial out on a BLF configured key on the expansion module EXP38.

To assign the key as BLF:

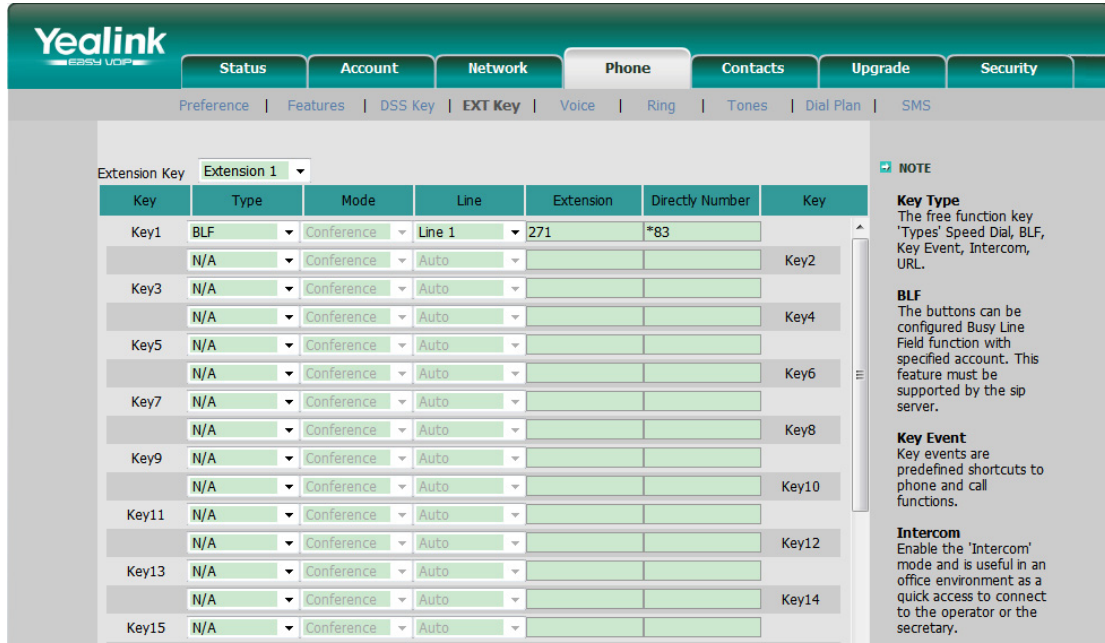

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, and choose BLF from the list.
- 2) In the "Line" field, select a line for which to apply this key, and enter the extension number you want to monitor.
- 3) Press Confirm button to save the changes.

Please refer to "LED Instruction" in the IP phone user manual for more details about the LED status in different situation.

Note:
 In the Web interface, you can also set the pickup number to active the pickup function. For example, if you set the BLF number as 212, and the pickup number is *83, then when there is an incoming call to 212, press the BLF key, it will call out the *83 automatically to pickup the incoming call on 212.

Speed Dial

You can configure the key as a simplified speed dial key. This key function allows you to speed up dialing numbers often used or hard to remember.

To assign the key as Speed Dial:

The screenshot shows the Yealink web interface for configuring Speed Dial keys. The interface includes a navigation bar with tabs for Status, Account, Network, Phone, Contacts, Upgrade, and Security. Below the navigation bar, there are sub-tabs for Preference, Features, DSS Key, EXT Key, Voice, Ring, Tones, Dial Plan, and SMS. The main content area shows a table for configuring keys, with columns for Key, Type, Mode, Line, Extension, and Directly Number. Key1 is configured as a Speed Dial key for Line 2 with extension 271 and directly number *83. Other keys (Key2-15) are currently set to N/A. A NOTE section on the right provides information about Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	Speed Dial	Conference	Line 2	271	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose Speed Dial from the list.
- 2) In the "Line" field, select a line for which to apply this key, in the "Number" field enter the extension number you want to perform Speed Dial.
- 3) Press Confirm button to save the changes.

Intercom

You can configure the key for Intercom mode and it is useful in an office environment as a quick access to connect to the operator or the secretary.

To assign the key as Intercom:

The screenshot shows the Yealink configuration interface for an EXT Key. The 'Type' is set to 'Intercom', 'Mode' is 'Conference', and 'Line' is 'Line 2'. The 'Extension' field contains '212' and the 'Directly Number' field contains '*83'. A table lists keys 1 through 15, with key 1 being the only one configured as Intercom. A 'NOTE' section on the right explains Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	Intercom	Conference	Line 2	212	*83	
Key2	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
Key4	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
Key6	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
Key8	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
Key10	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
Key12	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
Key14	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, and choose Intercom from the list.
- 2) In the "Line" field, select a line for which to apply this key, the default one is Auto which means it will match the account automatically. And enter the extension number you want to intercom.
- 3) Press Confirm button to save the changes.

Note:

Your VoIP PBX must support this feature. And make sure the intercom extension enables the Auto-answer function.

URL

If the key is configured as URL, then pressing this key, you can send HTTP requests to a web server.

To assign the key as URL:

The screenshot shows the Yealink configuration interface for the 'EXT Key' section. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys (Key1 to Key15) with columns for Key, Type, Mode, Line, Extension, and Directly Number. Key1 is configured with Type 'URL', Mode 'Conference', Line 'Auto', Extension '212', and Directly Number '*83'. All other keys have Type 'N/A'. A sidebar on the right contains a 'NOTE' and definitions for 'Key Type', 'BLF', 'Key Event', and 'Intercom'.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	URL	Conference	Auto	212	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, and choose URL from the list.
- 2) Enter the extension number you want to set as URL in the Extension field.
- 3) Press Confirm button to save the changes.

Share Line

Share Line Appearance (SLA), you can also call it Bridged Line Appearance (BLA). This feature allows subscribers to share SIP lines and also provides status monitoring of the shared line. When a user places an outgoing call using such an appearance, all members belonging to that particular SLA group are notified of this usage and are blocked from using this line appearance until the line goes back to idle state or when the call is placed on hold. Similarly all members of the SLA group are notified of an incoming call and the call can be picked up on a line appearance associated with the SLA extension.

To assign the key as SLA:

The screenshot shows the Yealink configuration page for 'EXT Key'. The 'Type' dropdown is set to 'Share Line', the 'Line' dropdown is set to 'Line 1', and the 'Extension' field contains '281'. The table below shows 16 keys, with Key1 configured as a Share Line and the others as N/A. The 'NOTE' sidebar on the right provides details for Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	Share Line	Conference	Line 1	281		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			
	N/A	Conference	Auto			Key16

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

URL

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, and choose Share Line from the list.
- 2) In the "Line" field, select a line for which to apply this key, and enter the extension number you want to set as SLA in the Extension field.
- 3) Press Confirm button to save the changes.

Conference

You are allowed to configure the programmable key to be used as a conference key. This key allows a user on a call to conference another party at a pre-defined number while remaining in the current call.

To assign the key as Conference:

Extension Key: Extension 1

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Conference	Auto	212	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Conference.
- 2) Press Confirm button to save the changes.

Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward page and you can set the Forward to number, then when there is any call to the extension number will be forwarded to the set number automatically.

To assign the key as Forward:

The screenshot shows the Yealink web interface for configuring an IP phone. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys, with Key1 configured as a Forward key. The 'Type' is 'KeyEvent', 'Mode' is 'Forward', 'Line' is 'Auto', 'Extension' is '218', and 'Directly Number' is '*83'. Other keys are set to 'N/A' and 'Conference' mode. A 'NOTE' section on the right explains 'Key Type', 'BLF', 'Key Event', and 'Intercom'.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Forward	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Forward from the list.
- 2) Enter the extension number you want to forward to in the Extension field.
- 3) Press Confirm button to save the changes.

Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended Transfer.

To assign the key as Transfer:

The screenshot shows the Yealink configuration interface for an IP phone. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. The 'Extension Key' is set to 'Extension 1'. A table lists keys 1 through 15. Key 1 is configured as a 'KeyEvent' in 'Transfer' mode, while all other keys are 'N/A' in 'Conference' mode. A 'NOTE' sidebar on the right explains Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Transfer	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Transfer from the list.
- 2) Press Confirm button to save the changes.

Hold

The key can be configured as a hold key. You can use this key to hold and retrieve a call during the conversation.

To assign the key as Hold:

The screenshot shows the Yealink configuration interface for an IP phone. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys, with Key1 configured as a 'Hold' key. The 'Type' field for Key1 is set to 'KeyEvent', and the 'Mode' field is set to 'Hold'. The 'Extension' field is set to '218' and the 'Directly Number' field is set to '*83'. Other keys (Key2-15) are currently set to 'N/A' for Type and 'Conference' for Mode. A 'NOTE' sidebar on the right provides definitions for 'Key Type', 'BLF', 'Key Event', and 'Intercom'.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Hold	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Hold from the list.
- 2) Press Confirm button to save the changes.

DND

If the key is configured as DND key, you are allowed to active the DND function immediately when you press it. Press it again to deactivate DND mode.

To assign the key as DND:

The screenshot shows the Yealink Easy UCP configuration interface. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. The 'Extension Key' is set to 'Extension 1'. A table lists 15 keys, with Key1 configured as a DND key. The 'NOTE' section on the right provides details about Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	DND	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose DND from the list.
- 2) Press Confirm button to save the changes.

Redial

If the key is configured as Redial key, press this key under the idle status, it will fetch the last dialed number, then you can choose a special line to call out by pressing the line keys.

To assign the key as redial:

The screenshot shows the Yealink configuration page for an EXT Key. The 'Type' is set to 'KeyEvent' and the 'Mode' is set to 'Redial'. The 'Extension' field contains '218' and the 'Directly Number' field contains '*83'. A table lists keys 1 through 15 with their respective configurations. A 'NOTE' section on the right provides details about Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Redial	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.


Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Redial from the list.
- 2) Press Confirm button to save the changes.

Call Return

When the key is configured as Call Return key you are allowed to dial out the last phone call you received.

To assign the key as Call Return:

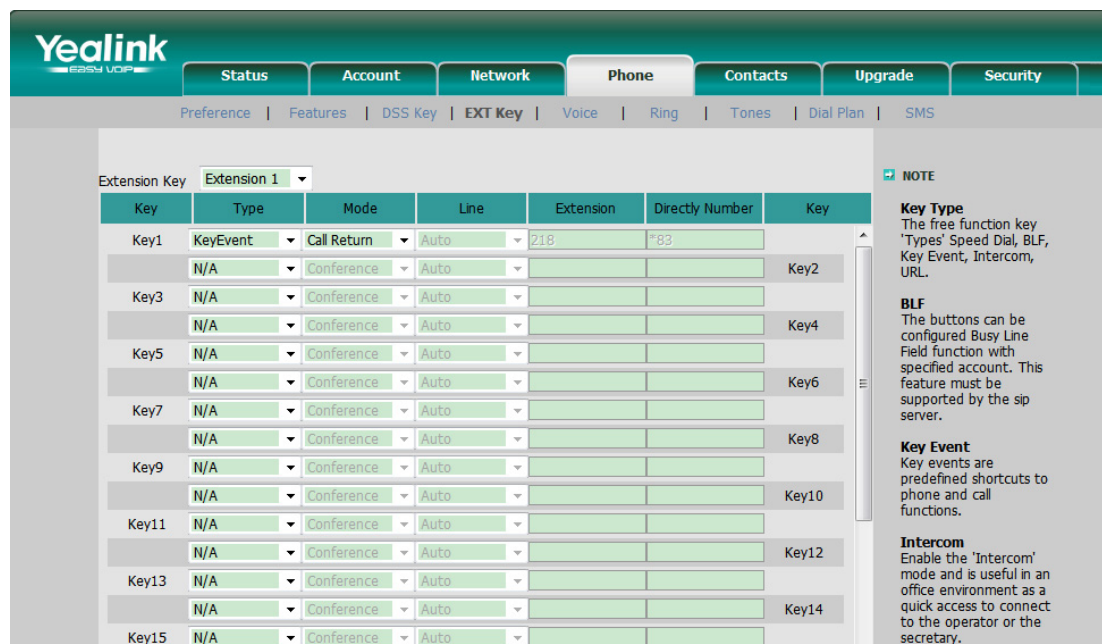

The screenshot shows the Yealink configuration interface for an IP phone. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys, with the first key (Key1) configured as a 'Call Return' key. The other keys are set to 'Conference' mode. A 'NOTE' section on the right provides details about 'Key Type', 'BLF', 'Key Event', and 'Intercom'.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Call Return	Auto	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Call Return from the list.
- 2) Press Confirm button to save the changes.

Group Pickup

When you configure a Group Pickup key, you specify the extension that you want to monitor. Then, when the monitored extension receives a call, you press the key to pick up the call. If the monitored extension receives multiple incoming calls simultaneously, the IP Phone UI displays a list of incoming calls. You select a call from this list, and are connected to the call.

To assign the key as Group Pickup:

The screenshot shows the Yealink configuration interface. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys, with Key1 configured as a Group Pickup key for Line 1, extension 218. A 'NOTE' sidebar on the right explains Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Group Pickup	Line 1	218	*83	
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.


- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Group Pickup from the list.
- 2) In the "Line" field, select a line for which to apply this key, and enter the extension number you want to pickup.
- 3) Press Confirm button to save the changes.

Call Park

Call Park is a feature that allows a person to put a call on hold at one telephone set and continue the conversation from any other telephone set.

The "call park" feature is activated by pressing a preprogrammed button or a special sequence of buttons. This transfers the current conversation to an unused extension number and immediately puts the conversation on hold. The telephone system will then display the extension number of the parked call so that the call can later be retrieved.

To assign the key as Call Park:

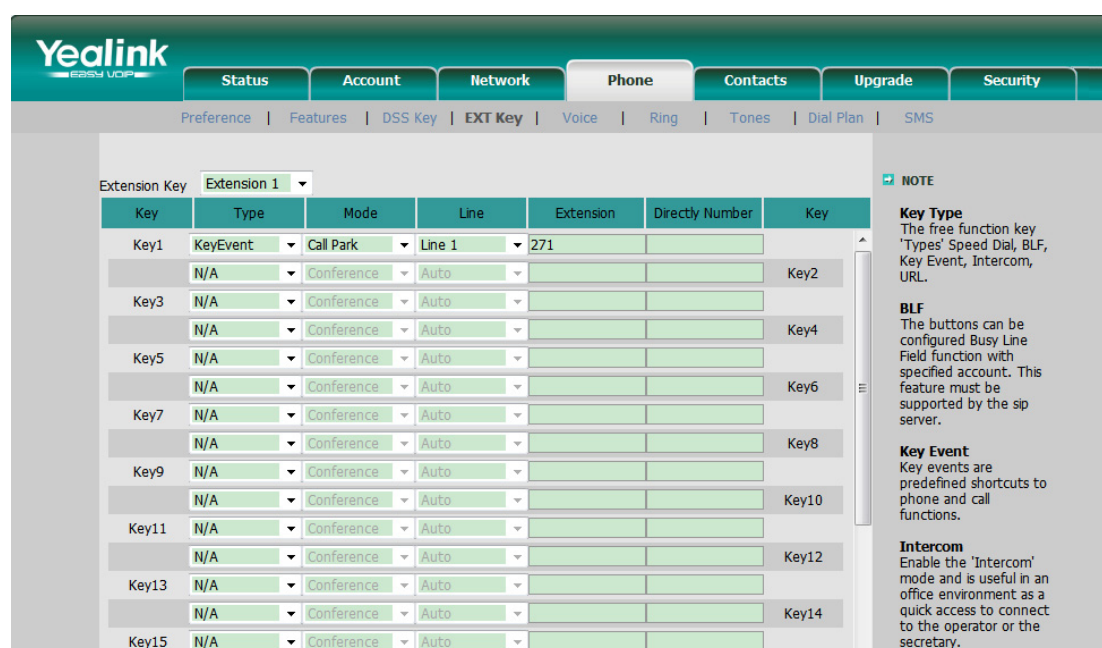

The screenshot shows the Yealink configuration interface for 'EXT Key'. The 'Extension Key' is set to 'Extension 1'. The table below shows the configuration for 15 keys. Key1 is configured as 'Call Park' on 'Line 1' with extension '271'. All other keys (Key2 through Key15) are configured as 'N/A' in 'Conference' mode on 'Auto' line.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Call Park	Line 1	271		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Call Park from the list.
- 2) In the "Line" field, select a line for which to apply this key, and enter the extension number you want to park.
- 3) Press Confirm button to save the changes.

Group Listening

When the key is configured as Group Listening key, you are allowed to enable the Speakerphone and Handset/Headset mode at the same time. It is suitable for the group conversation which has more than one person at one side. You are able to speak and listen using handset/headset; meanwhile the others near by can speak and listen using speakerphone. You can get back to the previous mode by pressing the key again.

To assign the key as Group Listening:

The screenshot shows the Yealink web interface for configuring a phone key. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. A table lists 15 keys, with Key1 configured for Group Listening. The 'Type' is 'KeyEvent' and the 'Mode' is 'Group Listenin'. Other keys are set to 'N/A' and 'Conference' mode. A 'NOTE' section on the right provides details for Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Group Listenin	Auto	271		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Group Listening from the list.
- 2) Press Confirm button to save the changes.

SMS

When the key is configured as SMS key you are allowed to access SMS quickly by pressing this key.

To assign the key as SMS:

The screenshot shows the Yealink configuration interface for an IP phone. The 'Phone' tab is selected, and the 'EXT Key' sub-tab is active. The 'Extension Key' is set to 'Extension 1'. A table lists 15 keys, with Key1 configured as 'KeyEvent' type and 'SMS' mode. Other keys are set to 'N/A' type and 'Conference' mode. A 'NOTE' sidebar on the right explains Key Type, BLF, Key Event, and Intercom features.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	SMS	Auto	271		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.


Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose SMS from the list.
- 2) Press Confirm button to save the changes.

Voicemail

When the key is configured as Voicemail key you are allowed to access voicemail quickly by pressing this key.

To assign the key as Voicemail:

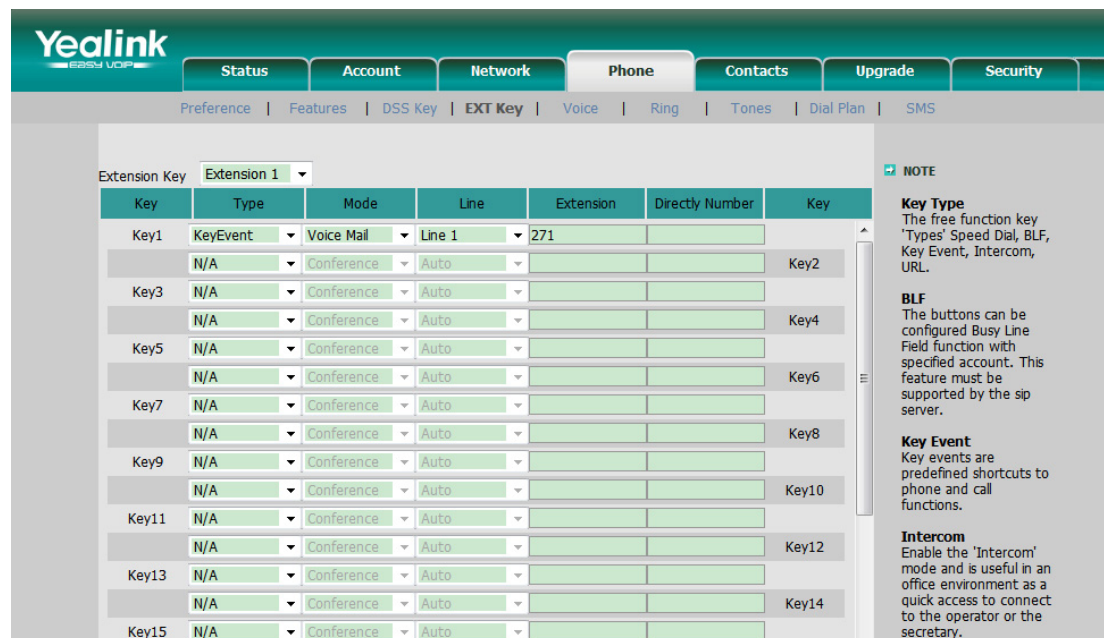

The screenshot shows the Yealink configuration interface for the 'EXT Key' section. A table lists keys from Key1 to Key15. Key1 is configured as a 'KeyEvent' in 'Voice Mail' mode on 'Line 1' with extension '271'. All other keys (Key2-15) are currently set to 'N/A' for Type and 'Conference' for Mode. A 'NOTE' sidebar on the right provides details for Key Type, BLF, Key Event, and Intercom features.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Voice Mail	Line 1	271		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Voicemail from the list.
- 2) In the "Line" field, select a line for which to apply this key, and enter the extension number you want to set as the voice mail box.
- 3) Press Confirm button to save the changes.

Custom

You are allowed to send out the desired DTMF number during the conversation. The number needs to be set in advance.

To assign the key as Custom:

The screenshot shows the Yealink web interface for configuring an extension key. The 'Phone' tab is active, and the 'EXT Key' sub-tab is selected. A table lists 15 keys (Key1 to Key15). Key1 is configured with Type 'KeyEvent', Mode 'Custom', and Extension '271'. All other keys (Key2 to Key15) have Type 'N/A' and Mode 'Conference'. The 'Line' column for all keys is set to 'Auto'. The 'Directly Number' column is empty for all keys. A 'NOTE' sidebar on the right provides information about Key Type, BLF, Key Event, and Intercom.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Custom	Auto	271		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.

- 1) Choose Phone->EXT Key, choose one of the key you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Custom from the list.
- 2) In the "Extension" field, enter the specific number.
- 3) Press Confirm button to save the changes.


Note:

If you connect more than one expansion module EXP38, then you can choose the Extension number in the Extension Key field to set the special one via the web interface.

Public Hold

The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or retrieve a call.

To assign the key as Public Hold:

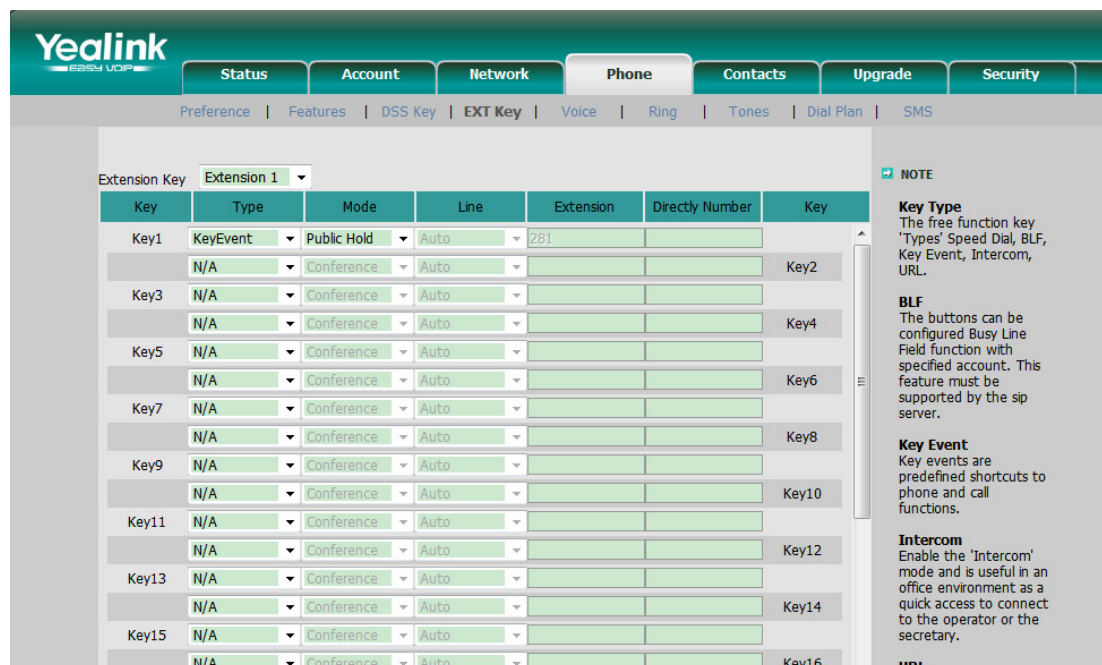

The screenshot shows the Yealink configuration interface for an EXT Key. The 'Type' is set to 'KeyEvent' and the 'Mode' is set to 'Public Hold'. The table below shows the configuration for keys 1 through 16.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Public Hold	Auto	281		
	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			
	N/A	Conference	Auto			Key16

NOTE

Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.

BLF
The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

Key Event
Key events are predefined shortcuts to phone and call functions.

Intercom
Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.


URL

- 1) Choose Phone-> EXT Key, choose one of the keys you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Public Hold from the list.
- 2) Press Confirm button to save the changes.

Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can retrieve the call.

To assign the key as Private Hold:

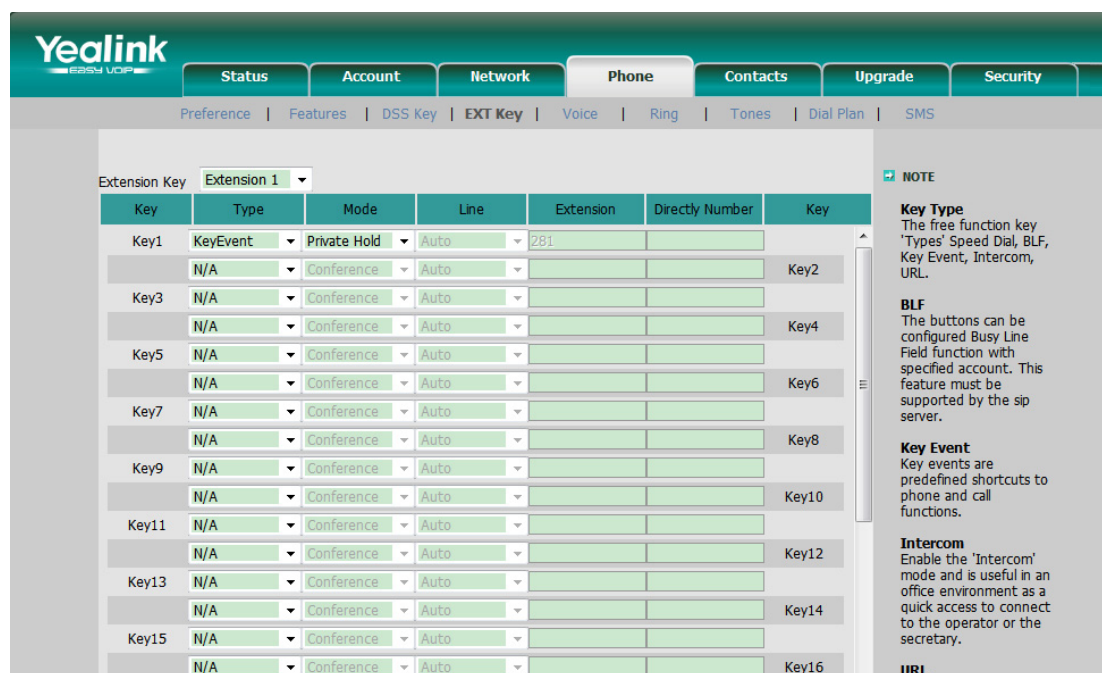

The screenshot shows the Yealink configuration page for 'EXT Key'. The 'Type' field for Key1 is set to 'KeyEvent' and the 'Mode' field is set to 'Private Hold'. The 'Line' field is set to 'Auto' and the 'Extension' field is set to '281'. The 'Directly Number' field is empty. The 'Key' field is set to 'Key2'. Other keys (Key3-16) are set to 'N/A' for Type and 'Conference' for Mode. The 'Line' field is set to 'Auto' and the 'Extension' field is empty. The 'Directly Number' field is empty. The 'Key' field is set to 'Key4', 'Key6', 'Key8', 'Key10', 'Key12', 'Key14', and 'Key16' respectively.

Key	Type	Mode	Line	Extension	Directly Number	Key
Key1	KeyEvent	Private Hold	Auto	281		
Key2	N/A	Conference	Auto			Key2
Key3	N/A	Conference	Auto			
Key4	N/A	Conference	Auto			Key4
Key5	N/A	Conference	Auto			
Key6	N/A	Conference	Auto			Key6
Key7	N/A	Conference	Auto			
Key8	N/A	Conference	Auto			Key8
Key9	N/A	Conference	Auto			
Key10	N/A	Conference	Auto			Key10
Key11	N/A	Conference	Auto			
Key12	N/A	Conference	Auto			Key12
Key13	N/A	Conference	Auto			
Key14	N/A	Conference	Auto			Key14
Key15	N/A	Conference	Auto			
Key16	N/A	Conference	Auto			Key16

NOTE
Key Type
 The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.
BLF
 The buttons can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.
Key Event
 Key events are predefined shortcuts to phone and call functions.
Intercom
 Enable the 'Intercom' mode and is useful in an office environment as a quick access to connect to the operator or the secretary.
URL

- 1) Choose Phone->EXT Key, choose one of the keys you want to make the assignment, there is a pull-down menu in the Type field, choose KeyEvent from the list, then in the Mode field, open the pull-down menu and choose Private Hold from the list.
- 2) Press Confirm button to save the changes.