

Grandstream Networks, Inc.

GAC2500 Audio Conference Phone for Android $^{\text{TM}}$ User Guide







COPYRIGHT

©2016 Grandstream Networks, Inc. http://www.grandstream.com

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

The latest electronic version of this guide is available for download here:

http://www.grandstream.com/support

Grandstream is a registered trademark and Grandstream logo is trademark of Grandstream Networks, Inc. in the United States, Europe and other countries.

CAUTION

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this guide, could void your manufacturer warranty.

WARNING

Please do not use a different power adaptor with devices as it may cause damage to the products and void the manufacturer warranty.





GNU GPL INFORMATION

GAC2500 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from: http://www.grandstream.com/sites/default/files/Resources/gpl_gac2500.tar.gz





Table of Content

DOCUMENT PURPOSE	
CHANGE LOG	13
Firmware Version 1.0.3.5	13
Firmware Version 1.0.1.45	13
Firmware Version 1.0.1.44	13
Firmware Version 1.0.1.40	14
Firmware Version 1.0.1.34	14
Firmware Version 1.0.1.26	14
Firmware Version 1.0.1.18	
Firmware Version 1.0.1.16	14
WELCOME	15
PRODUCT OVERVIEW	16
Feature Highlights	16
GAC2500 Technical Specifications	16
GETTING STARTED	18
Equipment Packaging	18
Product Appearance	
Powering the GAC2500	
Connection Configuration	20
IP Mode	21
USB Slave Mode	21
Cascade Mode	22
Mobile Phone Mode	23
GETTING TO KNOW GAC2500	25
Desktop	25
Status Icons	25
Using The Onscreen Keyboard	26
Keyboard	26
Numbers and Symbols	27
Using the LED Indicator	27
ASSISTIVE TOUCH	28
Use the Touchscreen	28
Shortcut Keys	29
Managing Status Bar	29
Desktop Menu	29





Edit Wallpaper	30
Edit Desktop	30
Adding an Item to Desktop	33
Managing Desktop Apps and Items	3
Managing Applications	33
CONNECTING TO NETWORK AND DEVICES	35
Network	35
Ethernet	35
WI-FI	35
Turning Wi-Fi On or Off	35
Search and Add Wi-Fi	36
Bluetooth	36
Turning Bluetooth On or Off	36
Pairing GAC2500 with A Bluetooth Device	36
Connecting to A Bluetooth Device	37
Sending Files Via Bluetooth	38
VPN Settings	38
LLDP SETTINGS	39
802.1X MODE	39
MAKING PHONE CALLS	41
Account	4 ²
Making A Call	41
Direct Dialing	4
Redial	42
Dialing A Number Via Contact	42
Dialing A Number Via Call History	
Direct IP Call	4
Paging/Intercom	4
Answering A Call	44
Reject Call Via SMS	44
Call Management	45
Call Hold and Call Resume	4
Call Record	46
Call Details	47
Mute	48
Call Transfer	48
Blind Transfer	49
Attended Transfer	49
DND (Do Not Disturb)	5 ²
Missed Call	52





Call Forward	52
Set On LCD	52
Set from Web GUI	52
7-WAY CONFERENCE	53
Initiating Conference	53
Answering an Incoming Call in Conference	54
Conference Management	55
Invite Members to Conference	56
Removing Member from Conference	57
Third Party Applications	57
End Conference	57
Schedule Conference	57
View Conference Details	58
Add Scheduled Conference	58
Schedule Conference via Google Calendar	60
Edit Scheduled Conference	61
Reschedule Conference	62
Delete Scheduled Conference	62
Delete History Conference	62
Voicemail	63
APPLICATIONS	65
Contacts	
Local Contacts	
Add Contact	
Download Contacts	
Search Contacts	
Manage Contacts	
Groups	
Blacklist	
LDAP	
Call History	
Call Count Call History	
Add Contact from Call History	
Delete Call History	
Schedule Conference Via Call History	
Intercepted History	
Hotkeys(MPK)	
Event list	
MPK List	
MPK Settings	
Wi i Gottings	





Notices	86
View Notices	86
Delete Notices	86
Notices Settings	87
File Manager	87
Copy File	88
Send File	88
Delete File	88
Rename File	89
Recorder	89
Normal Recorder	89
Call Recorder	90
Recorder Settings	90
Sound	91
Diagnosis	91
Browser	91
GS Market	92
Search Apps	92
Download and Install Apps	92
Update Apps	92
FTP Server	92
User Helper	93
GAC2500 WEB UI FEATURES	95
Accessing GAC2500 Web GUI	
Saving Changes	
Definitions	
Toolbar	
Call Page	
Making A Call	
Single Incoming Call	
Conference Control	
Contacts Page	
Contacts	
Groups	
Blacklist	
Schedule	
Call History	
LDAP	103
FACTORY RESET	104
Restore to Factory Default Via LCD Menu	104





EX	PERIENCING THE GAC2500 APPLICATION PHONE	106
	Neset via buttori	100
	Reset Via Button	105
	Restore to Factory Default Via the Web GUI	104
	D () E (D (107 11 M OH)	404





Table of Tables

Table 1: GAC2500 Features in a Glance	16
Table 2: GAC2500 Technical Specifications	16
Table 3: Equipment Packaging	18
Table 4: GAC2500 Interfaces Explanations	19
Table 5: GAC2500 Status Icons Descriptions	25
Table 6: GAC2500 LED Indicator Descriptions	27
Table 7: GAC2500 VLAN Configuration Parameters	39
Table 8: GAC2500 LLDP Configuration Parameters	39
Table 9: GAC2500 802.1X Mode Parameters	
Table 10: GAC2500 Add Conference Parameters	59
Table 11: GAC2500 Import Contacts Parameters	67
Table 12: GAC2500 Download Contacts Parameters	
Table 13: GAC2500 Export Contacts Parameters	70
Table 14: GAC2500 Blacklist Settings Parameters	
Table 15: GAC2500 LDAP Book Parameters	76
Table 16: GAC2500 MOK Settings Parameters	85
Table 17: GAC2500 Users Access Permissions	96





Table of Figures

Figure 1: GAC2500 Package Content	18
Figure 2: GAC2500 Host Interface	19
Figure 3: Powering the GAC2500	20
Figure 4: Connecting the GAC2500	20
Figure 5: GAC2500 Slave Mode Screen	21
Figure 6: Connected to Wrong USB Port	22
Figure 7: GAC2500 Cascade Mode Screen	22
Figure 8: GAC2500 Select line Sequence Screen	23
Figure 9: GAC2500 Multi-screens	25
Figure 10: GAC2500 Soft Keyboard - English Input Method	26
Figure 11: GAC2500 English Keyboard - Uppercase	27
Figure 12: GAC2500 Finger Gestures on the Touch Screen	28
Figure 13: GAC2500 Status Bar - Notifications	29
Figure 14: GAC2500 Idle Screen Menu	30
Figure 15: GAC2500 Choose Wallpaper	30
Figure 16 GAC2500 Edit Desktop	31
Figure 17: GAC2500 Weather Forecast Screen	32
Figure 18: GAC2500 Move Weather Forecast to Desktop	32
Figure 19: GAC2500 Remove Weather Forecast from Desktop	33
Figure 20: GAC2500 Managing Applications	33
Figure 21: GAC2500 Home Screen	34
Figure 22: GAC2500 Add Wi-Fi Screen	36
Figure 23: GAC2500 Bluetooth - Paired Device	37
Figure 24: GAC2500 Bluetooth – Headset Mode	37
Figure 25: GAC2500 Add VPN Files Screen	38
Figure 26: GAC2500 Registered Account Status	41
Figure 27: GAC2500 Single Incoming Call Screen	44
Figure 28: GAC2500 New Incoming Call Screen	44
Figure 29: GAC2500 Single Calling Screen	45
Figure 30: GAC2500 Call On Hold Screen	46
Figure 31: GAC2500 Mew - Start Recording	47
Figure 32: More softkey	47
Figure 33: Call Details	48
Figure 34: GAC2500 Mute Call Screen	48
Figure 35: GAC2500 Transfer - Blind Transfer	49
Figure 36: GAC2500 Transfer - Attended Transfer	50
Figure 37: GAC2500 Call Forward - Select Forward Mode	50
Figure 38: GAC2500 Call Forward - Transferring	51
Figure 39: GAC2500 Call Forward - Split	51





Figure 40: GAC2500 Call Forward Type Setting Screen	52
Figure 41: GAC2500 Call Forward Mode On Web GUI	52
Figure 42: GAC2500 Conference Screen	53
Figure 43: GAC2500 Add Party To Conference	54
Figure 44: Conference Incoming Call	54
Figure 45: Call Added to Conference	55
Figure 46: GAC2500 3-Way Conference	55
Figure 47: GAC2500 Conference-More	56
Figure 48: GAC2500 Schedule Screen	58
Figure 49: GAC2500 Conference Details Screen	58
Figure 50: GAC2500 Add Conference Screen	59
Figure 51: Add Google Schedule	60
Figure 52: Select Google Account	61
Figure 53: Google Calendar Conference	61
Figure 54: GAC2500 Delete Scheduled Conference Screen	62
Figure 55: GAC2500 Delete History Conference Screen	63
Figure 56: GAC2500 Batch Delete History Conference Screen	63
Figure 57: GAC2500 Voice Mail Application	64
Figure 58: GAC2500 Contacts Screen	65
Figure 59: GAC2500 Local Contacts Screen	65
Figure 60: GAC2500 Add New Contact Screen	66
Figure 61: GAC2500 Import Contacts Parameters Screen	67
Figure 62: GAC2500 Contacts Screen	68
Figure 63: GAC2500 Contact Edit Page	69
Figure 64: GAC2500 Export Contacts Screen	70
Figure 65: GAC2500 Contacts Storage Status Screen	71
Figure 66: GAC2500 Add Google Account - Wizard 1 &2	71
Figure 67: GAC2500 Groups Screen	72
Figure 68: GAC2500 Add Group Screen	72
Figure 69: GAC2500 Dial Group Members Screen	73
Figure 70: GAC2500 Edit Group Screen	73
Figure 71: GAC2500 Blacklist Screen	74
Figure 72: GAC2500 Manual Add Blacklist Screen	75
Figure 73: GAC2500 Blacklist Settings Screen	75
Figure 74: GAC2500 LDAP Book Screen	76
Figure 75: GAC2500 LDAP Settings	76
Figure 76: GAC2500 Web GUI Maintenance - LDAP Book	78
Figure 77: GAC2500 Add LDAP Contact To Local	79
Figure 78: GAC2500 Call History Screen	79
Figure 79: GAC2500 Call History Details	80
Figure 80: Call History Count	80





Figure 81: Call History Count Details	81
Figure 82: GAC2500 Add Contact Screen	81
Figure 83: GAC2500 Conference Call History Screen	82
Figure 84: GAC2500 Intercepted History Screen	82
Figure 85: GAC2500 Add MPK Number	83
Figure 86: GAC2500 Add Number from Contacts	83
Figure 87: GAC2500 MPK Number Screen	84
Figure 88: GAC2500 MPK URI Screen	84
Figure 89: GAC2500 MPK List	85
Figure 90: GAC2500 MPK Settings Screen	85
Figure 91: GAC2500 Notices Screen	86
Figure 92: GAC2500 View Notices	86
Figure 93: GAC2500 Notices Settings Screen	87
Figure 94: GAC2500 Incoming Call Screen	87
Figure 95: File Manager	88
Figure 96: GAC2500 Recorder Main Screen	89
Figure 97: GAC2500 Normal Record - Recording	90
Figure 98 GAC2500 Call Recordings	90
Figure 99: GAC2500 Recorder Settings Screen	91
Figure 100: GAC2500 FTP Server Connection	93
Figure 101: GAC2500 FTP Server Settings	93
Figure 102: GAC2500 Quick User Guide	94
Figure 103: GAC2500 Web GUI - Login	95
Figure 104: GAC2500 Web UI Tool Bar	96
Figure 105: GAC2500 Web UI – Call	97
Figure 106: GAC2500 Web UI - Single Incoming Call	98
Figure 107: GAC2500 Web UI - Minimize Call Screen	98
Figure 108: GAC2500 Web UI - Conference Control	98
Figure 109: GAC2500 Web UI - Minimize Conference Screen	99
Figure 110: GAC2500 Web UI - Contacts	99
Figure 111: GAC2500 Web UI - Groups	100
Figure 112: GAC2500 Web Page - Blacklist	101
Figure 113: GAC2500 Web Page - Upcoming Conference	101
Figure 114: GAC2500 Web Page - History Conference	102
Figure 115: GAC2500 Web UI - Call History	102
Figure 116: Factory reset	104
Figure 117: Factory Reset on Web UI	104
Figure 118: Web III - Factory Reset Confirmation	105





DOCUMENT PURPOSE

This document describes how to configure the GAC2500 via phone's LCD menu and web UI menu to fully manipulate phone's features. To learn the advanced functions of GAC2500, please visit http://www.grandstream.com/support to download the latest "GAC2500 Administration Guide".

This guide covers following topics:

- Product Overview
- Getting Started
- Getting to know GAC2500
- Assistive Touch
- Connecting the GAC2500
- Making Phone Calls
- Applications
- GAC2500 Web UI Features
- Factory Reset
- Experiencing GAC2500





CHANGE LOG

This section documents significant changes from previous versions of GAC2500 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.3.5

- Prompt tips when GAC2500 is connected to wrong GVC USB port. [USB Slave Mode]
- Improved audio process performance.
- Supports using dial pad to dial out call in Skype for business app. [Account]
- When removing app from GUI Config tool, the GAC2500 will delete it including background service rather than hiding the app in background only.
- Added call detail in calling interface. When in a call, simply choose "More" and "Call Details". [Call Details]
- DUT in a conference with an outgoing call will add all incoming call to conference. [Answering an Incoming Call in Conference]
- Changed LDAP search timeout unit to second. [Search timeout (s)]
- · Changed internal storage icon. [File Manager]
- Modify phone type and Email type to English only while importing/exporting Contacts xml file on Universal Phone Editor.
- Added more operation on LCD for GVC320x when GAC2500 is connected to GVC320x via USB. [USB Slave Mode]
- Added count of calls for call history on LCD. [Call Count Call History]
- Improved DUT's behavior when using option "Use # as Dial Key" to dial out. [Direct Dialing]
- Added support for Google Calendar conference schedule features. [Schedule Conference via Google Calendar]
- Shortened reminding tone for incoming intercom call. [Paging/Intercom]
- Added support for Bluetooth A2DP sink role, which means GAC2500 can connect to GVC320x and mobile devices via Bluetooth to play music files.
- Packed new CFG file for new hardware production.
- Added some missing tooltips.
- Improved the web UI design on IE browser.
- Added voice mode setting, users can set 6 different voice mode. [Sound]
- Trimmed the multicast name displaying on web talking interface.
- Allowed DUT to display a widget shape even there is no account registered.

Firmware Version 1.0.1.45

Added support for new hardware version

Firmware Version 1.0.1.44

No major changes





Firmware Version 1.0.1.40

- Improved the sound quality.
- The 3.5mm interface is mainly used for place a cellphone in a conference. So the volume range differs from cellphones. Please adjust the volume on the cellphone if it is too high.

Firmware Version 1.0.1.34

- The dial pad has a MPK access key, and MPK app has different layout. [Shortcut]
- MPK app is renamed to Hotkeys.
- Updated call feature of Contact on dial pad.
- Updated LCD layout (Only reset to enable new layout. Move some apps to Tool Folder).
- Enabled password for schedule conference.
- Added ability to start a contact and put it on top of contact.
- Added direct IP call on dial pad without changing call mode. [Direct IP Call]
- Added ability to create a hotkey for a contact or a group.
- Updated tool tips display on web UI.
- Updated RJ48 cascade mode. LCD supports complete synchronization.
- When screen lock is enabled, unlock is required for MPK, transfer, add to conf in a call.
- Added a PNP icon on status bar when enabled.
- Updated videos in Tips app.

Firmware Version 1.0.1.26

- Added setting LCD home screen.
- Added hold/unhold for individual conference participant.
- Added FTP server. [FTP Server]
- Added GAC2500 guick guide.

Firmware Version 1.0.1.18

- Increased call history to 2000 entries. [Contacts Storage Status]
- Updated 3.5mm AUX line sequence interface.
- Updated the screenshots.
- Added cycle conference. [Add Scheduled Conference]
- Updated the chapter of third party application.

Firmware Version 1.0.1.16

This is the initial version.





WELCOME

Thank you for purchasing Grandstream GAC2500 Audio Conference Phone for AndroidTM. This User Guide describes the basic concept and tasks necessary to use and configure your GAC2500. This document covers the topics of conference environment setups, start conference and the relevant operations like conference reservation. To learn the advanced features and configurations, please visit http://www.grandstream.com to download the latest "GAC2500 Administration Guide".

GAC2500 is a next generation enterprise-grade 6-line Android IP conference phone with a 4.3" capacitive touch screen that that runs the Android Operating System and therefore offers full access to the hundreds of thousands of Android apps in the Google Play Store, including business productivity apps such as Skype™, Skype for Business™, and Google Hangouts™. The phone features Gigabit ports, 7-way conference, 3x microphones, 1 Micro USB port, integrated WiFi and Bluetooth for network flexibility. The GAC2500 delivers superior HD audio quality, rich and leading edge telephony features, automated provisioning for easy deployment, advanced security protection for privacy, and broad interoperability with most 3rd party SIP devices and leading SIP/NGN/IMS platforms. GAC2500 is a perfect choice for enterprise users looking for a high performance, feature rich conference phone with superb audio quality at competitive price.





PRODUCT OVERVIEW

Feature Highlights

The following tables contain the major features of the GAC2500:

Table 1: GAC2500 Features in a Glance



- Runs Android[™] 4.4 and offers full access to all Android[™] conference apps in the Google Play Store (e.g., Skype[™], Skype for Business[™], Google Hangouts[™], etc.)
- World-class high fidelity sound quality with audio bandwidth of up to 18Khz
- 4.3" capacitive touch screen LCD with support for flexible layout/content customization
- 3x microphones (12 ft. pickup range), 1x speaker (15 ft. coverage range)
- Auto-sensing Gigabit Ethernet port, Wi-Fi, PoE+, Bluetooth, Micro-USB with 3.5mm audio interface
- Supports standalone IP mode or USB slave mode
- Supports daisy chain (up to 2 units via RJ48 CAT5) mode in large conference room for better audio quality
- NAT-T enables the phone being the Plug and Play device
- Automated provisioning using TR-069 or AES encrypted XML configuration file, TLS/SRTP/HTTPS for advanced security and privacy protection

GAC2500 Technical Specifications

The following table resumes all the technical specifications including the protocols / standards supported, voice codecs, telephony features, languages and upgrade/provisioning settings for the GAC2500.

Table 2: GAC2500 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6 (pending), OpenVPN (pending)
Voice Codec	Support for G.711 μ /a, G.722, G.726, iLBC, Opus, G.722.1 and G.722.1c (pending), in-band and out-of-band DTMF (In audio, RFC2833, SIP INFO), G.729A/B, VAD, CNG, AEC, PLC, AJB, AGC
Platform Bridging	Bridge SIP calls with any Android™ VoIP apps such as Skype™, Skype for Business (Lync), Google Hangouts™ and more





Telephony Features	Hold, transfer, forward (unconditional/no-answer/busy/conditional), call park/pickup, 7-way audio conference, auto answer, downloadable XML phone book (up to 2000 entries), LDAP, call waiting, call history (up to 2000 entries), flexible dial plan, personalized music ringtones, server redundancy & fail-over
Sample Applications	Skype™, Google Hangouts™, Skype for Business (Lync), Web browser, Facebook™, Twitter™, YouTube, Google calendar, mobile phone data import/export via Bluetooth, etc. API/SDK available for advanced custom application development
Application Deployment	Allows Android 4.4 compliant applications to be deployed in the device with provisioning control
QoS	Layer 2 QoS (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, TLS, 128/256-bit SRTP/TLS, HTTPS, 802.1x media access control
Multi-Language	English, German, Italian, French, Spanish, Portuguese, Russian, Turkish, Polish, Chinese, Korean, Japanese, and more
Upgrade/ Provisioning	Firmware upgrade via TFTP / HTTP / HTTPS or local HTTP upload, mass provisioning using TR-069 or AES encrypted XML configuration file
Network Interface	1x auto-sensing Gigabit Ethernet port, integrated 2.4GHZ auto-band Wi-Fi (802.11a/b/g/n) and 4.0 Bluetooth.
HD Audio	3x microphones (12 ft. pickup range), 1x speaker (220-18,000 Hz, 15 ft. coverage range up to 86dB)
Auxiliary Ports	3.5mm audio interface, Micro-USB interface, RJ48 interface, reset pin
Graphic Display	4.3" (800*480) capacitive touch screen LCD
Power & Green Energy Efficiency	Universal power adapter included: Input: 100-240VAC 50-60Hz; Output: 12VDC, 2A (24W)
Temperature and Humidity	Operating: 32 - 104oF / 0 - 40oC Storage: 14 - 140oF / -10 - 60oC Humidity: 10% to 90% Non-condensing
Compliance	FCC: Part 15 (CFR 47) Class B; UL 60950 (power adapter) CE: EN55022 Class B, EN55024, EN61000-3-2, EN61000-3-3, EN60950-1, EN62479, RoHS RCM: AS/ACIF S004; AS/NZS CISPR22/24; AS/NZS 60950; AS/NZS 4268





GETTING STARTED

This chapter provides basic installation instructions including the list of the packaging contents and also information for obtaining the best performance with the GAC2500.

Equipment Packaging

Table 3: Equipment Packaging

GAC2500

- 1 x GAC2500 Main Case.
- 1 x 12V Power Adapter.
- 1 x Ethernet Cable
- 1 x Micro-USB Cable
- 1 x RJ48 CAT5
- 1 x Quick Installation Guide
- 1 x GPL License

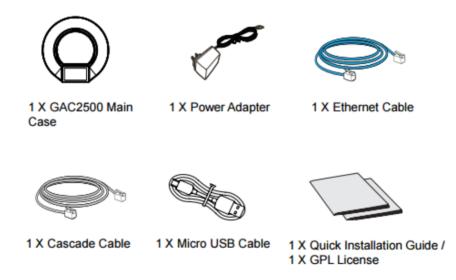


Figure 1: GAC2500 Package Content

Note: Check the package before installation. If you find anything missing, contact your system administrator.





Product Appearance

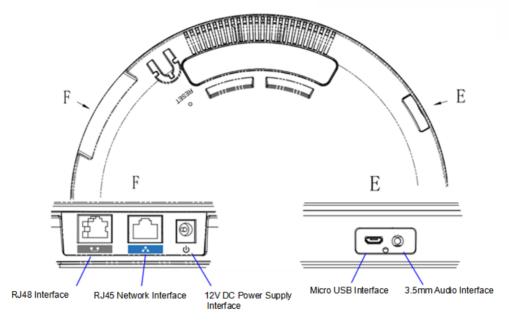


Figure 2: GAC2500 Host Interface

Table 4: GAC2500 Interfaces Explanations

Name	Explanation
RJ48 Interface	Daisy chain (up to 2 units via RJ48 CAT5) mode in large conference room for better audio quality.
RJ45 Network Interface	Connect to LAN port.
12V DC Power Supply Interface	Connect to Power Adaptor.
Micro USB Interface	USB OTG devices can be connected to GAC2500 via the USB cable. For example, connect a USB flash drive to read data, or PC USB Interface or GVC32XX SPKR Interface can be connected to the GAC2500 USB Interface via USB cable for audio pickup and play
3.5mm Audio Interface	Connect to 3.5mm devices like mobile phone or PC for mobile audio pickup and play
Reset Pin	 When the GAC2500 is powered up, use a small pin to press the button one time to reboot. When powering up GAC2500, long press the button for 4 to 9 seconds to detect whether firmware file exists in USB OTG device to update system. When powering up GAC2500, long press the button for more than 10 seconds to quick restore factory settings.





Powering the GAC2500

The GAC2500 can be powered either using POE or PSU, please refer to the following picture to have more visibility how to connect your audio conferencing system.

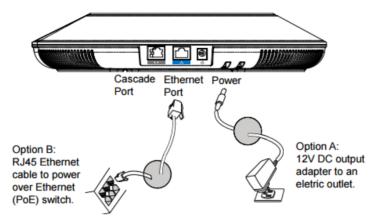


Figure 3: Powering the GAC2500

Connection Configuration

GAC2500 provides the following connection configurations:

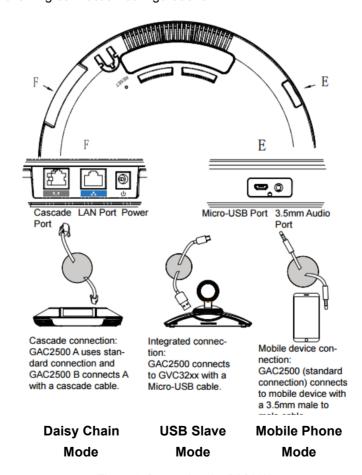


Figure 4: Connecting the GAC2500





IP Mode

The GAC2500 is used as an independent phone in IP mode. Please follow the steps below to connect.

- 1. Connect the LAN port of the device to the external network port (the port in the office or at home) via Ethernet cable:
- 2. Plug in the power adapter into the power supply interface then power up the GAC2500.



Note: It is recommended to use IP mode in room 3.6m* 7.2m or smaller.

USB Slave Mode

GAC2500 can be used as auxiliary device for GVC3200 or PC for audio acquisition and play. The conference feature will be disabled in USB slave mode. Follow the steps below to connect route.

- Connect one end of the USB cable to the Micro USB port of the device and the other end to the USB port of GVC3200/PC;
- 2. Plug in the power adapter into the power supply interface then power up the GAC2500.

The GAC2500 screen is as shown below in USB slave mode.



Figure 5: GAC2500 Slave Mode Screen

- Call

Tape on the Call icon to see the GVC3200 call screen, users can make Audio/Video calls, share contents, Hold/Unhold, Record, Enable/Disable DND, and add more users to the conference.

- Contacts

Tape on contact and a list of the GVC3200 will show up, users can search, make calls and sync with GVC3200 contacts if a new entry is added from the GVC3200.

- Schedule

Tape on Schedule to view all the scheduled meeting from GVC3200.

- PTZ

Tape on PTZ to access the GVC3200 PTZ settings, users could control PTZ movement in camera mode, set presets, zoom In/Out and adjust the focus.





If the GAC2500 is not connected to the SPKR USB interface it will prompt the following message in order to switch the port on the GVC3200.

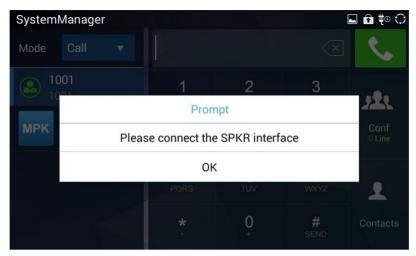


Figure 6: Connected to Wrong USB Port

Note: If GAC2500 is connecting to PC via Micro-USB but there is no audio output from GAC2500, it is because the PC uses default audio output in most cases. Please configure GAC2500 as default audio output.

Cascade Mode

Connect two GAC2500 (s) via RJ48 CAT5 for larger space. Please follow the steps below to connect.

- 1. Connect the LAN port of the device to the external network port (the port in the office or at home) via Ethernet cable:
- 2. Connect the RJ48 ports of two devices with RJ48 CAT5;
- 3. Plug in two power adapters into the power supply interfaces then power up two devices;
- 4. The screen is as shown below. Tap on "Yes" on the first device and set it to be the master while the other the slave.



Figure 7: GAC2500 Cascade Mode Screen





⚠ Note:

- It is recommended to use cascade mode in room 7.2m*12.2m or smaller.
- Please keep a distance of 5m between two devices.
- Please make sure the master device is connected to the network or it may not work properly.
- The slave device will synchronize with the master device and their dial screens will be shown synchronously.

Mobile Phone Mode

GAC2500 could be connected to mobile phone for expanded use. Please follow the steps to connect.

- 1. Connect the LAN port of the device to the external network port (the port in the office or at home) via Ethernet cable:
- 2. Plug in the power adapter into the power supply interface then power up the GAC2500;
- 3. Connect one end of the via 3.5mm audio aux cable to 3.5mm headset interface on the mobile phone first, then connect the other end to 3.5mm audio interface on GAC2500, once connected, it will access 3.5mm AUX call screen:

Note: If the audio quality is not good, it may be the line sequence issue, you can hold the screen at the top of the status bar, drag and drop down to open the status bar, tap on line sequence notifications and select the line sequence the same as the one of 3.5mm headset interface on the mobile phone.

4. When the mobile phone is answering an incoming call or dialing out, GAC2500 will collect and play the sound.

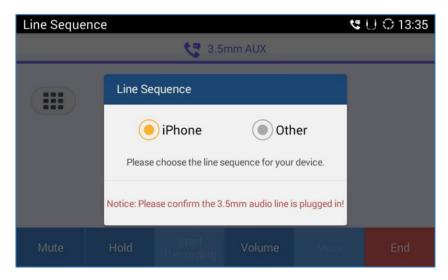


Figure 8: GAC2500 Select line Sequence Screen

⚠ Note

• The GAC2500 package contains no 3.5mm audio aux cable, you can buy one at electronic gadgets store.





- The line sequence of GAC2500 must be the same as the one of your mobile phone, or the microphone may work improperly.
- It is recommended to connect mobile phone first, then GAC2500.
- You cannot dial or call a number via GAC2500 keypad directly.
- Once mobile phone mode is enabled, the 3.5mm audio aux line is regarded as one call line.
- Once a conference is established, the 3.5mm audio aux line is regarded as one party of the conference.
- Please do not unplug the 3.5mm audio aux cable or it may cause call exception.
- The audio quality may vary according to different types of 3.5mm audio aux cable and mobile phones.
- Once the 3.5mm male to male cable is inserted, some types of mobile phones may be detected by GAC2500 only after the call is established.





GETTING TO KNOW GAC2500

Desktop

When the GAC2500 is on idle screen, hold the screen at the bottom of the screen, drag upward to bring up 5 soft keys; hold the screen at the top of the status bar, drag and drop down to open the status bar,



Figure 9: GAC2500 Multi-screens

- Home Screen. GAC2500 Home screen is a dial screen by default. You can dial up or start a conference
 on this screen. To change the home screen, please long press the blank area and select "Edit desktop".
 - Press the button in the preview desktop to set it as home screen.
- Widget. GAC2500 supports tools and Apps like Weather Forecast, Clock, MPK, and etc.
- **Status Bar**. The GAC2500 status bar is located on the top of the screen to indicate the current status of the device. Please refer to chapter **Status Icons** for more details.
- **Soft Keys**. 5 sofkeys Including Volume+, Volume-, Back, Home, and Process Manager. Drag and slide upward at the bottom of the screen o bring out soft keys, the keys will be hidden automatically if no operation timeout.

Status Icons


Touch the status bar of GAC2500 and slowly drag it down to display the full status list. Users could view status icons that indicate the current status of the device. The following table lists the main status icons used on GAC2500.

Table 5: GAC2500 Status Icons Descriptions

Icon	Descriptions	lcon	Descriptions	lcon	Descriptions
\odot	Ethernet is connected	\odot	Trying to connect to Ethernet	Û	Ethernet is disconnected
t ×	Missed call	5	One line is in active	9	Unread voicemail
Ç	Calls from blacklist	t	Call forward is set up	€	Auto answer is set up





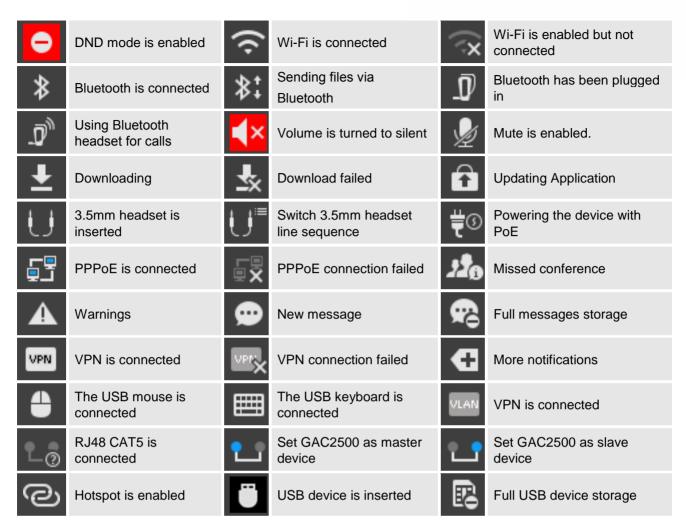

Using The Onscreen Keyboard

Kevboard

The default keyboard on the GAC2500 is English keyboard. The GAC2500 English keyboard supports multiple languages input methods. Users could tap on languages configured under LCD Menu Settings -> Language & Keyboard -> Keyboard & Input methods. See figure below.



Figure 10: GAC2500 Soft Keyboard - English Input Method

Tap on to switch Caps Lock.







Figure 11: GAC2500 English Keyboard - Uppercase

Numbers and Symbols

To input numbers and symbols, tap on the default keyboard to switch to numbers/symbols. Tap on for more numbers/symbols.

Using the LED Indicator

The GAC2500 LED indicator is located on the top part of the device. It can be used to notify the users with current status of the device. The priority of the indicator from high to low is shown below.

LED Indicator Descriptions Color **Status** Incoming call (including calls when conferencing and when **Fast Flashing** phone is busy). Solid Calling, Talking, Conferencing, Screensaver status. **Slow Flashing** Call on hold. Unhandled events. Including missed call (s), new voicemail **Slow Flashing** (s), new SIP message (s). High memory usage, full message box, full contacts storage, Solid network disconnection. **Rapid Flashing** Upgrading. None **OFF** Normal.

Table 6: GAC2500 LED Indicator Descriptions

Note: The colors and statuses of LED indicators are by default. You can go to Web page->Maintenance->Device Manager to custom indicators.





ASSISTIVE TOUCH

Use the Touchscreen

To fully manipulate the GAC2500 capacitive touch screen, use your fingers to operate the following on the GAC2500 icons, buttons, menu items, onscreen keyboard and etc.

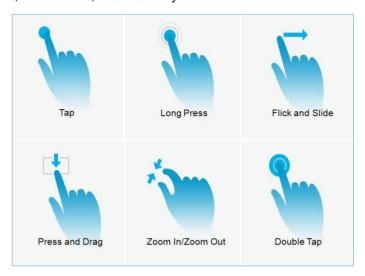


Figure 12: GAC2500 Finger Gestures on the Touch Screen

Tap

Slightly touch the screen with fingertip to initiate menu, options or applications. For example, to select items on the screen (e.g., setting options, apps and etc.); to press onscreen buttons (e.g., "End" or "Options" soft key during the call); to type letters and symbols using the onscreen keyboard.

Long Press

Touch the screen with fingertip and press for about 2 seconds without lifting your finger from the screen till an action occurs. For example, long press on a picture to bring up selection option.

Flick and Slide

Touch the screen with fingertip and slide over the screen. For example, user could slide up to scroll up the page, slide down to open dropdown menu, slide left or slide right to delete an item from the list. If your finger stays on the screen for too long, the item may be selected and sliding won't occur.

· Press and Drag

Touch and press the item, then move it by dragging it up, down, left or right, without lifting your finger from the screen.

Zoom in/Zoom Out

Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in).

Double Tap

Quickly touch the screen twice with fingertip to switch between default display and zoomed-in display. This is usually used when viewing photos or web pages.





Shortcut Keys

GAC2500 supports shortcuts for some special operation like Screenshots, Factory Reset, Upgrade and Security.

- **Screenshot**. Long press the Process Manager icon on GAC2500 screen, the screenshot file will be saved automatically in the screenshot folder under SD card. Go to File Manager->Storage->Pictures->Screenshots to view files.
- **Factory Reset**. When powering up GAC2500, long press the reset button on the back of the device for more than 10 seconds to restore to factory settings.
- Upgrade. When powering up GAC2500, long press the button for 4 to 9 seconds to update system.

Managing Status Bar

The GAC2500 status bar is located on the top of the screen. Touch the bar and slowly drag it down to display the full status list. Once the status bar is opened, users could view Notifications.

The Notifications in the Status Bar is as shown in figure below.

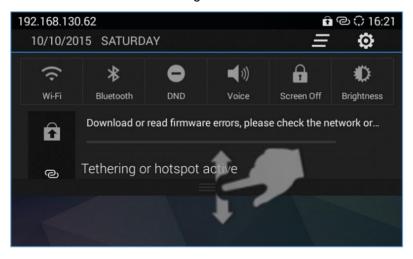


Figure 13: GAC2500 Status Bar - Notifications

Click on button on the upper right corner to clear all notification messages.

- Slide a notification message to left or right to delete it.
- Click a notification message to view the details.
- Tap on the corresponding icon on the top of the screen to quick turn on/off the applications.
- Long press the corresponding icon on the top of the screen to quick access the applications.
- Drag the seek bar behind the icon to adjust LCD brightness.

Desktop Menu

When the GAC2500 is on idle screen, long press the blank area, then you can tap on "Edit desktop" or "Set wallpaper". See figure below.





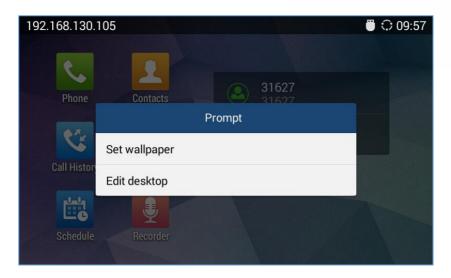


Figure 14: GAC2500 Idle Screen Menu

- Edit Wallpaper: Edit the idle screen wallpaper.
- Edit Desktop: Add, delete, edit desktop or add widgets on the desktop.

Edit Wallpaper

You can set wallpapers, live wallpapers or choose photo from gallery. See figure below.



Figure 15: GAC2500 Choose Wallpaper

- 1. Long press the blank area on home screen then tap on "Set Wallpaper";
- 2. Slide wallpapers to left or right to view a list of sample wallpapers embedded in the GAC2500, tap on wallpaper to preview, tap on "Set Wallpaper" to confirm the selection. You can also select photo from gallery or file manager, or set live wallpapers.

Edit Desktop

The desktop screen is as shown below.







Figure 16 GAC2500 Edit Desktop

- · Add Desktop: Press finger slightly in free space of the screen and fast slide to the last screen and click
 - on the middle screen to add a new desktop. Users could add up to 15 desktops.
- Delete Desktop: Click on the upper right corner of the blank desktop to delete it. The desktop with widgets and shortcuts on it is undeletable.
- Tap on the icon of a preview desktop to set it as home screen.

Adding an Item to Desktop

Users could add commonly used items (Weather Forecast, RSS News, etc.) to the desktop. Follow the steps below:

- 1. When the GAC2500 is running on idle screen, long press the blank area, then tap on "Edit Desktop";
- Slide left or right to view a list of options;
- 3. Press and drag the shortcut or widget you would like to add and drag it to the desktop you want to put on.



Note:

- Please ensure that there is enough space on the desktop when adding widget.
- Users may need to select the specific items before add them to the desktop. i.e., browser, bookmark, star-labeled contact, photos, etc.

Managing Desktop Apps and Items

All the GAC2500 apps/items can be accessed /removed. Take Weather Forecast as an example in the following chapter.

- Opening an app





Tap on Weather Forecast icon to access screen as shown on the following figure. Users could edit Weather Forecast after accessing it.



Figure 17: GAC2500 Weather Forecast Screen

- Moving an app

Touch and hold the Weather Forecast icon, when the icon begins to float, drag it to any desktop with free space.



Figure 18: GAC2500 Move Weather Forecast to Desktop

- Removing an App

Touch and hold the Weather Forecast icon until the Recycle Bin icon displayed on the top as shown in figure 18, drag the widget to the Recycle Bin, when the item gets close to the Recycle Bin, it will turn red. Now release your finger to delete.





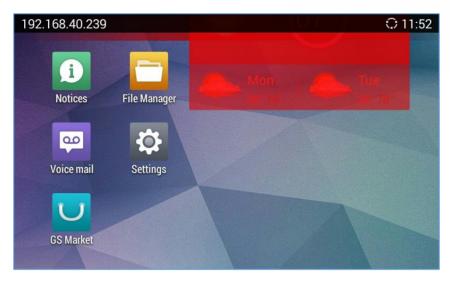


Figure 19: GAC2500 Remove Weather Forecast from Desktop

Note: The system applications cannot be deleted.

Managing Applications

Tap on the Process Manager icon on screen to view the running applications on the GAC2500 as shown below.

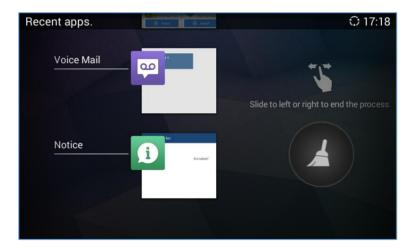


Figure 20: GAC2500 Managing Applications

Slide up/down to view the applications, tap on one and slide left/right to turn it off, or tap on it to access the corresponding interface. Tap on to turn off all running applications.





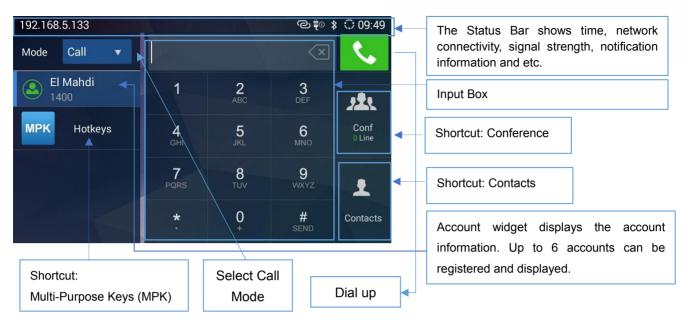


Figure 21: GAC2500 Home Screen

- Mode. Set the call mode.
- Account. Display all registered accounts. Tap to select account.
- **Input box**. Tap on digits below to input phone number, or tap on the input box to bring out the soft keyboard. You'll see all the matching numbers on the left when you inputting digits, tap on the number to add it to input box directly, you can add up to 6 numbers.
- Dial-up. Tap to dial out.
- Conference. Display the conference line. Tap to access conference interface.
- Contacts. Tap to access Contacts interface to add more contacts to the input box.
- Hotkeys. This is a quick access to MPK app.

You can slide left or right to the Conference app on other desktops, or dial out multiple numbers to start a conference on home screen.





CONNECTING TO NETWORK AND DEVICES

The GAC2500 supports a variety of network connections (Ethernet, Wi-Fi) and device connections, you can configure on GAC2500 or log in the GAC2500 web UI to configure. For more information about using web UI, please refer to the GAC2500 Administration Guide in www.grandstream.com.

Network

Network connection has a variety of ways, one is wired connection via the cables, and the other way is to connect via Wi-Fi.

Ethernet

If the user would like to use Ethernet connection for network access, please connect the Ethernet cable to the LAN port of the GAC2500. Ethernet connection is turned on as DHCP by default.

To configure Ethernet settings on GAC2500:

- 1. Plug the Ethernet cable into the LAN port on the back of the GAC2500.
- 2. Go to LCD menu->Settings->Advanced settings -> Wireless & network -> Ethernet -> IPv4 Settings.
- 3. Tap on "Address Type" to select DHCP, Static IP or PPPoE as the address type.
 - For DHCP, save the setting and the GAC2500 should be able to get IP address from the DHCP server in the network.
 - For static IP, enter IP Address, Subnet Mask, Default Gateway, DNS Server and Alternative DNS server for the GAC2500 to correctly connect to the network.
 - For PPPoE, enter PPPoE account ID and password so the GAC2500 can get IP address from the PPPoE server.

WI-FI

Turning Wi-Fi On or Off

Wi-Fi is supported and built-in on the GAC2500. On the LCD display, go to Settings->Advanced settings->Wireless & network -> Wi-Fi to turn on and configure Wi-Fi.





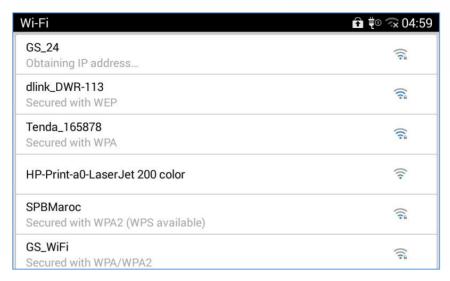


Figure 22: GAC2500 Add Wi-Fi Screen

Search and Add Wi-Fi

Once Wi-Fi is turned on, GAC2500 will automatically start the scanning within the range. A list of Wi-Fi networks will be displayed as scanning result. Tap on the SSID and enter the correct password information to connect to the selected Wi-Fi network.

Follow the steps below for static IP usage in Wi-Fi environment:

- 1. Tap on one Wi-Fi network in the scanned Wi-Fi list to bring up the dialog that shows signal strength, security, password and option "Show advanced options".
- 2. Select "Show advanced options". The dialog will show additional option "IP settings".
- 3. In "IP settings", select Static IP, enter IP Address, Subnet Mask, and Default Gateway for the GAC2500 to correctly connect to the network.

Bluetooth

Users could use the Bluetooth to send or receive files to cellphone, or use Bluetooth speaker and etc.

Turning Bluetooth On or Off

There are two ways to enable Bluetooth:

- On the LCD display device, go to Settings->Network->Bluetooth.
- Click to enable the Bluetooth in the drop-down status bar.

Pairing GAC2500 with A Bluetooth Device

Before connecting GAC2500 with other Bluetooth device, users must pair them first. They will stay paired afterwards unless they are manually unpaired. To pair Bluetooth device:

- 1. On the LCD display device, go to Settings->Bluetooth. Switch the "Bluetooth" option.
- 2. Select "Bluetooth settings", drag up from LCD bottom and press button on the remote control and select "Search for devices".





- 3. The GAC2500 scans and displays the IDs of all available Bluetooth devices in range. Once the Bluetooth device shows up in the result, tap on it to start pairing.
- 4. Confirm the passkey in the prompted message (if any). Or if passcode is required, please refer to the device's documentation or other procedures to obtain the passcode.

Connecting to A Bluetooth Device

After successfully paired, the device will be connected to the GAC2500 immediately. Users will see this

device listed under "Paired Devices". Tap on next to the connected device. Users will see options "Rename", "Unpair" and etc.

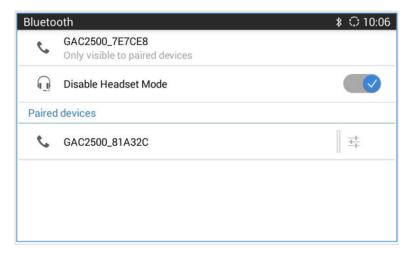


Figure 23: GAC2500 Bluetooth - Paired Device

If the connection is lost between the Bluetooth device and GAC2500, go to LCD menu -> Settings -> Bluetooth->Bluetooth setting and click on the device name under "Paired devices" again to reconnect. When enabled headset mode, the connected Bluetooth device could use GAC2500 as a headset audio device. You can see the Bluetooth device is displayed as an account on the left home screen. You can make dial-ups with this account directly, or as a party to join conference.



Figure 24: GAC2500 Bluetooth - Headset Mode





⚠ Note:

- When enabled Bluetooth headset mode, a pop-up dialog will prompt to remind users whether import contact or call history from Bluetooth device (your phone), if agree, when you input digits in input box, the device will automatically start contact/call history matching.
- When enabled Bluetooth headset mode, when your Bluetooth device has an incoming call, GAC2500 also rings and displays call screen at the same time. You can either answer the call with your Bluetooth device or GAC2500.
- When enabled Bluetooth headset mode, you can switch audio channels freely on your Bluetooth device.
- please note when enabled Bluetooth headset mode, making calls with Bluetooth account is actually with your device and it may generate flow/communication fees, GAC2500 only serves as a Bluetooth headset to transmit and control audio.

Sending Files Via Bluetooth

Users could transfer files, share contacts information from other Bluetooth portable devices to GAC2500 after pairing and connection. A prompt for file transferring will be displayed on GAC2500 LCD display device when the GAC2500 receives the file transferring request. Accept the request to receive file and the file will be stored under SD Card/Bluetooth directory.

VPN Settings

Users can add VPN using different protocols. Follow the steps below to set up VPN.

- On the LCD display device, go to Settings ->Advanced settings->Wireless & network->VPN;
- 2. Tap on "Add VPN file" to access configuration page as shown below:



Figure 25: GAC2500 Add VPN Files Screen

- 3. Fill in parameters and save, go back to VPN page, you will find the new VPN file you just added;
- 4. Tap on the VPN file to open the validation page, fill in correct username and password to connect to VPN.





If the GAC2500 is connected to VPN successfully, icon will be shown in the top status bar; if the

connection is failed, a prompt box will pop up to remind users whether to connect again. If icon displays in the top status bar, please check whether your VPN configuration is correct.



Table 7: GAC2500 VLAN Configuration Parameters

Parameters	Descriptions
Layer 2 QoS 802.1q/VLAN Tag	Assigns the VLAN Tag of the Layer 2 QoS packets for LAN port. Default value is 0. Note: Please do not change the setting before understanding the VLAN's settings or consulting the network administrator. Otherwise, the device might not be able to get the correct IP address.
Layer 2 QoS 802.1p Priority	Assigns the priority value of the Layer 2 QoS packets. Default value is 0.

LLDP SETTINGS

Access GAC2500 home screen, go to Settings->Advanced settings->Wireless & network->Additional network settings to configure LLDP settings on the GAC2500.

Table 8: GAC2500 LLDP Configuration Parameters

Parameters	Descriptions
LLDP	Enable or disable LLDP. The default setting is disabled.
Layer 3 QoS for SIP	This field defines the layer 3 QoS parameter for SIP packets. It is the value used for IP Precedence, Diff-Serv or MPLS. The Default value is 48.
Layer 3 QoS for Audio	This field defines the layer 3 QoS parameter for audio packets. It is the value used for IP Precedence, Diff-Serv or MPLS. The Default value is 48.
Layer 3 QoS for Video	This field defines the layer 3 QoS parameter for video packets. It is the value used for IP Precedence, Diff-Serv or MPLS. The Default value is 48;

802.1X MODE

Access GAC2500 home screen, go to Settings->Advanced settings->Wireless & network->Additional network settings->802.1X Mode. By default, 802.1X is disabled. Select 802.1X mode to "EAP-MD5", "EAP-TLS5" or "EAP-PEAP" to turn on 802.1X. Once 802.1X mode is enabled, the user will be required to enter the identity and Password to be authenticated in the network.

Table 9: GAC2500 802.1X Mode Parameters

Parameters	Descriptions
802.1x Mode	Allows the user to enable/disable 802.1X and configure 802.1X mode. The default
	setting is disabled.





Identity	Enter the Identity information for the 802.1X mode.
MD5 Password	Enter the MD5 Password for the 802.1X mode.
CA Certificate	Upload the CA certificate for the 802.1X mode.
Client Certificate	Upload the CA certificate for the 802.1X mode.
Private Key	Upload the private key for the 802.1X mode.





MAKING PHONE CALLS

Account

GAC2500 supports up to 6 independent SIP account and 1 BlueJeans™ account. Users need to register their own accounts to the SIP server to make calls via the accounts.

The following figure shows the account is successfully registered (account icon is highlighted in green).

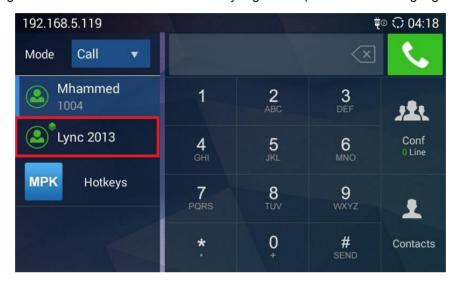


Figure 26: GAC2500 Registered Account Status

The GAC2500 supports also using dial pad to dial out call in Skype for business app.

Making A Call

Direct Dialing

GAC2500 home screen is the dial screen or you can tap on on desktop to access dial screen.

- 1. Enter the dial screen, select account and call mode;
- 2. Enter the necessary digits on the keypad;
- 3. Tap on 🔽 to dial out.

A Notes

- 1. GAC2500 allows users to configure the "#" key as the "Send" key. If users need to cancel this setting, please log in the built-in Web page to set the parameter "use # as the dial key" to "No".
- 2. Enter digits in the dial-up box. If the digits or the letters for the digit matches contacts and call history, a dropdown list of numbers will be displayed. For example, entering 5 (JKL), 6 (MNO), 4 (GHI) and 6 (MNO) will display 5646 or john if contact "john" exists. Users can then select it to dial out.
- 3. Users do not need to change call mode to "IP call" to make a IP call. Dial the full IP such as 192*168*124*123#5062 would make the call. But quick IP call still needs "IP call" selected.






- 4. If input area has a number, the GAC2500 will check the account call settings to see if "Use # as Dial Key" is enabled or not.
- 5. If input area has no number, DUT will use '#' as redial directly.

Redial

Redial is to dial the last dialed-out number. It is only available when the call log exists.

- 1. Enter the dial screen;
- 2. Press the button or tap on "#" to dial the last dialed-out number automatically.



Dialing A Number Via Contact

Follow the steps below to dial from dial pad Contacts.

- 1. Click on the Contacts on the down right of dial pad.
- 2. Input the number.
- 3. Tap on the dial key oto dial out.

Or, check the for more than one contact, then tap on on the up right to start a conference.

Follow the steps below to dial a number via Contacts app.

- 1. On the LCD display device, access Contacts by tapping on the icon LCD.
- 2. Navigate and select in the Contacts entries using the remote control navigation keys.
- 3. Tap on the dial key 🕓 to dial out.

Dialing A Number Via Call History

- On the LCD display device, access Applications on home screen and access call history by selecting icon
- 2. The LCD will display all call history types. Navigate in the call history list by selecting the call history category. Select the call history entry you would like to dial out.
- 3. Press to dial out.

Or, check the for more than one contact, then tap on on the up right to start a conference.

Follow the steps below to dial a number via Contacts app.

1. On the LCD display device, access Contacts by tapping on the icon LCD.





- 2. Navigate and select in the Contacts entries using the remote control navigation keys.
- 3. Tap on the dial key 5 to dial out.

Direct IP Call

Direct IP Call allows GAC2500 and another VoIP device to talk to each other in an ad-hoc fashion without a SIP proxy. VoIP calls can be made between these two if:

- Both GAC2500 and VoIP phone have public IP addresses Or
- Both GAC2500 and VoIP phone are on the same LAN / VPN using private or public IP addresses Or
- NAT is disabled in network or GAC2500 NAT is disabled for the account.

Both devices can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

To make a direct IP call, please follow the steps below:

- 1. Access the dial screen on GAC2500;
- 2. Set the mode to "IP Call";
- Input the target IP address. For example, if the target IP address is 192.168.124.123 and the port is 5062, input the following:

192*168*124*123#5062

The * key represents the dot (.) and the # key represents the colon (:).

Press to dial out.



- In dial pad, default call mode also supports IP call by dialing IP address. GAC2500 would analyze the input and make IP calls.
- Default call mode does not support quick IP call. If you want to make quick IP call, please change the call mode to "IP call".

Paging/Intercom

Before placing paging/intercom, please make sure the callee has paging/intercom enabled so it can automatically answer the paging/intercom call. To make paging/intercom call:

- 1. Access the dial screen on GAC2500;
- 2. Set the mode to "Paging";
- Enter the number to dial; 3.
- Press to dial out





Answering A Call

When the device is in idle and there is an incoming call, the device will show the call screen as below.



Figure 27: GAC2500 Single Incoming Call Screen

Select "Answer" to answer the call, or reject the call by pressing the "Reject" soft key.

When there is an incoming call during an active call, users will hear a call waiting tone with the LCD displaying the caller name and ID for the incoming call.



Figure 28: GAC2500 New Incoming Call Screen

Users could select "Answer" to answer with audio only, or eject the call by pressing the "Reject" soft key.

Reject Call Via SMS

Users could reject incoming calls via messages. Please access Notices application on desktop and

tap on Settings on the upper right corner, and enable "Enable Quick Reply". You can also tap on below to custom your reply.

Once enabled "Enable quick reply", when there is an incoming call, you can tap on "SMS reply" to access quick reply list, select the reply to send the reject call.





Note: Notices reject function works when the callee sends the SIP message to the caller to reject call, please confirm your service provider supports this service.

Call Management

During an active call, you can make other operations like hold/hold, mute/unmute, call recording, add a new call, start conference, or end the call.

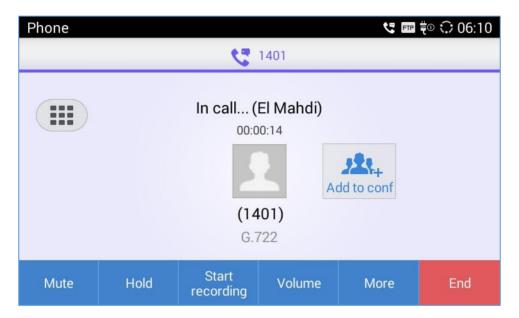


Figure 29: GAC2500 Single Calling Screen

- Call Lines: Display the current line status: active, hold, incoming, outgoing.
- Add to Conf: Tap to add all active lines to conference members.
- Mute/Unmute: Tap to mute/unmute the call.
- Hold/Unhold: Tap to hold/hold the call.
- Start/Stop recording: Tap to start/stop recording.
- Volume: Tap to bring up the volume bar to adjust the volume.
- More: Bring up more options including like MPK, Transfer, etc.
- DTMP Keypad: Tap to bring up the DTMF keypad.
- End: End the current line.

Call Hold and Call Resume

- Call Hold

During the active call, press HOLD button to put the current call on hold. Users could then make or answer a new call. It shows as follows:





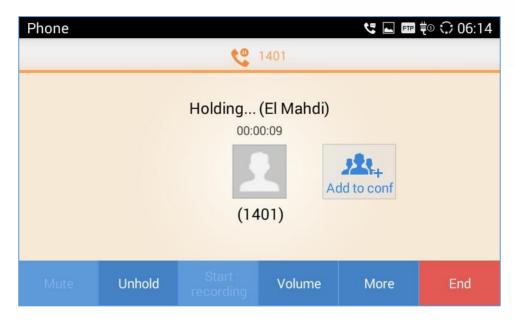


Figure 30: GAC2500 Call On Hold Screen

- Resume to Call

If the active call is on hold, users could press the "Unhold" button to resume call or tap on the "End" button to hang up the call.

Call Record

Users could save the call conversations to the GAC2500 by recording during an active call. You can listen to the recordings from Recorder, please refer to the chapter Recorder for details.

- 1. During an active call, tap on the "Start Recording" soft key in the bottom to start recording as shown in the figure below:
- 2. Tap on the Stop Recoding soft key to stop recording.





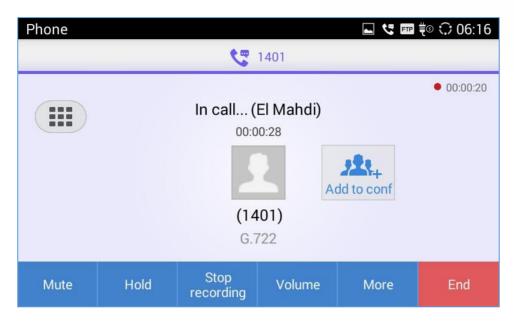


Figure 31: GAC2500 Mew - Start Recording

Call Details

Users could view the call details of the GAC2500 during an active call by following steps below:

1. During an active call, tap on the "More" soft key in the bottom to show more options as shown in the figure below:

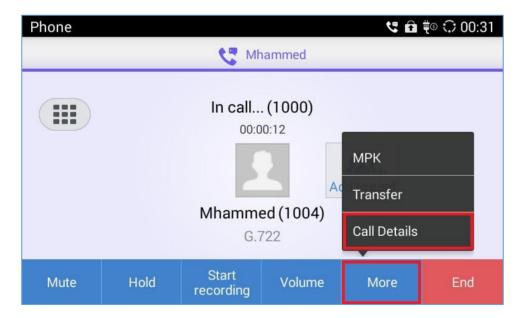


Figure 32: More softkey

2. Tap on the "Call Details" soft key to show the call details.





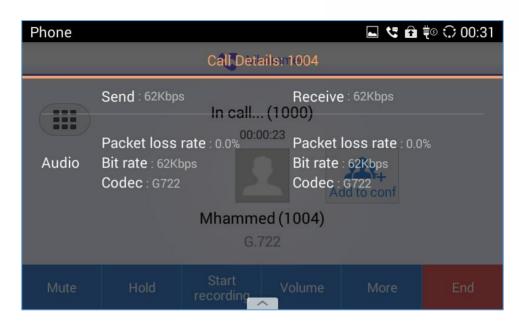


Figure 33: Call Details

Mute

During the active call, you can tap on the "Mute" button to mute the call, you will not be heard by others. The screen is as shown below.

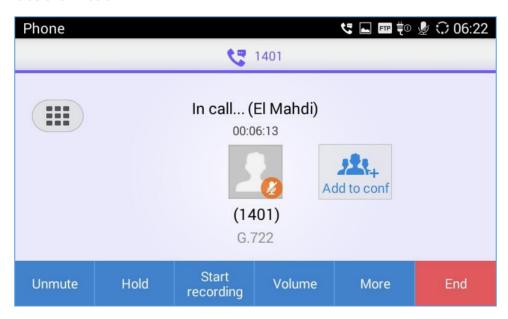


Figure 34: GAC2500 Mute Call Screen

Call Transfer

is a telecommunications mechanism that enables a user to relocate an existing telephone call to another phone or attendant console, Call transfer including blind transfer and attended transfer according to different situations, for example, if user A wants to transfer the call with user B to user C, blind transfer or attended transfer is optional.





Blind Transfer

- 1. User A and user B are in an active call.
- 2. User A tap on Transfer button to bring up the transfer screen;
- 3. Set the transfer mode to Blind. The default mode is Blind;
- 4. Enter the digits and press the SEND to transfer the call with user B to User C. When user C's phone rings, the phone interface of user A is shown in figure 32. If user C answers the call, user A will automatically go back to the idle screen, which indicates the successful transfer;
- 5. User C's phone will ring, the phone with CID function will display user B's number on screen as the caller.

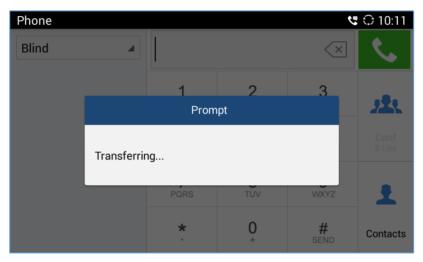


Figure 35: GAC2500 Transfer - Blind Transfer

⚠ Note:

- If inputted the wrong digits, press the button to delete the digit one by one, or long press the button to empty all digits.
- Users could drag up the bottom of LCD and tap on Back icon to go back to the active call interface
 if wants to cancel transfer.
- The result of step 4 and 5 may differ because of SIP servers. The result described below is based on Grandstream SIP server.

Attended Transfer

There are two ways of attended transfer: Call Forward and Call Transfer.

- CALL TRANSFER

- 1. User A and user B are in an active call;
- 2. User A presses the button to add a new line with user C. The call with user B will be automatically put on hold;





- 3. User C answers the phone to set up the line with user A; User A taps on More button in the menu then choose Transfer to bring up the transfer screen. The line with user B will be displayed on screen;
- 4. User A sets the transfer mode to Attended then choose to display user B's number, the call will be transferred to user C. User B and user C could talk directly via the phone.

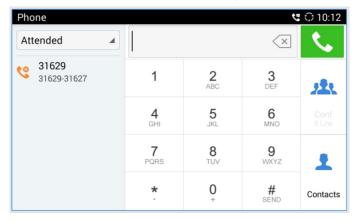


Figure 36: GAC2500 Transfer - Attended Transfer

- CALL FORWARD

- 1. User A and user B are in an active call. User A tap on More button in the menu to choose Transfer to bring up the transfer screen;
- 2. Select the Transfer mode. As shown in figure 34;

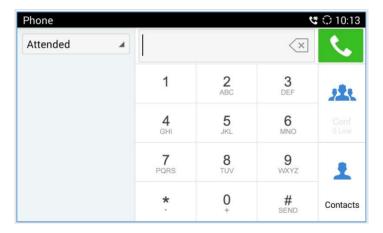


Figure 37: GAC2500 Call Forward - Select Forward Mode

- 3. Input digits and then press the Send soft key;
- 4. Users will hear the ring back tone and see the prompt as shown below. Hang up the phone to transfer the call to the third party C automatically; press the "Cancel" button will cancel the transfer;





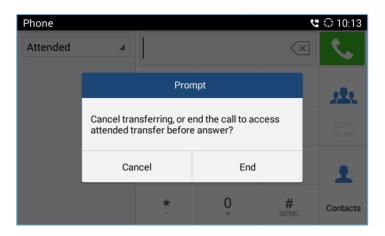


Figure 38: GAC2500 Call Forward - Transferring

5. User A could press the "Transfer" button to forward the call to user C. Click on "Split" button to establish line with the third patty, while user B will be put on hold.

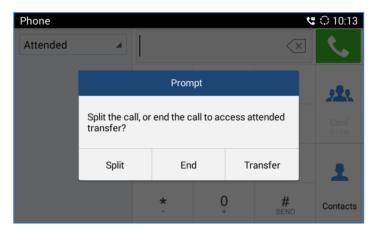


Figure 39: GAC2500 Call Forward - Split

DND (Do Not Disturb)

When DND is on, the incoming calls to the GAC2500 will be blocked without ringing. Users could see the blocked calls in call history. Once enabled, the DND icon blocked calls in call history. Once enabled, the DND icon blocked calls in call history. Once enabled, the DND icon blocked without ringing. Users could see the blocked without ringing. Users could see the blocked calls in call history. Once enabled, the DND icon blocked without ringing. Users could see the blocked without ringing. Users could see the blocked calls in call history. Once enabled, the DND icon blocked without ringing.

- 1. Hold the screen at the top of the status bar, drag and drop down to open the status bar.
- 2. Touch the DND icon to turn it on/off.



- When DND is on, the active call will not be affected, all the calls after to the registered accounts will be blocked.
- When DND is on, the incoming calls to the GAC2500 will be saved in the call history.





Missed Call

When there is a missed call, the LCD will show missed call screen instead of regular idle screen. Users can tap on the one of missed call entry to access the missed call log. To close the missed call screen

and return to the idle screen, tap on on the upper right.



Call Forward

Call forward (Unconditional/No-answer/Busy/Time-based) can be set up on device or from web GUI. Log in GAC2500 web GUI and go to Settings page->Account->Call Settings. For details, please refer to "GAC2500 Administration Guide".

Set On LCD

Go to Settings->Personalized account to select the account and access configuration page and Tap on Call Forwarding Type to access and specify the forward type.

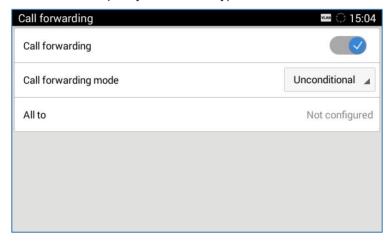


Figure 40: GAC2500 Call Forward Type Setting Screen

- **Unconditional**: Forward all calls to particular number
- **Time based**: Forward calls based on the time range.
- **Busy**: Forward calls when an active call exists.
- **No-answer**: Forward calls when phone is not answered.

Set from Web GUI

Log in the Web GUI and go to Account->Call Settings to find Call Forward option as shown below and specifies the call forward mode in the drop-down list.




Figure 41: GAC2500 Call Forward Mode On Web GUI





7-WAY CONFERENCE

The GAC2500 supports up to 7-way conference. The GAC2500 can be the host to initiate a conference or join other conferences as a party.

Initiating Conference

The conference can be initiated from dial screen, or start conference from schedule. The following steps introduces two ways to start conference from dial screen, please refer to chapter **Schedule Conference** for more details about initiating conference from schedule.

- Enter multiple numbers in the text box or select parties from the list below.
- 1. Access dial screen when the phone is on idle;
- 2. Set call mode and select account;
- 3. Enter digits in the textbox;
- 4. Tap on the matching phone number on the left to add it to the textbox, you can add multiple numbers.
- 5. Repeat the steps 3-4 to add more numbers;
- 6. Tap on to dial out.
- Press to access conference page, then tap on to add parties.
- 1. Access dial screen when the phone is on idle;
- 2. Tap on Conf button A or the icon icon access conference page as shown below;

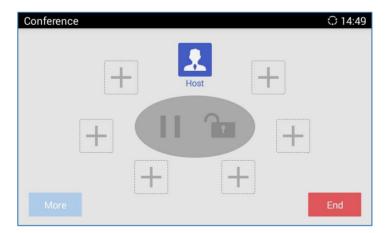


Figure 42: GAC2500 Conference Screen

3. Tap on to start adding parties to conference;





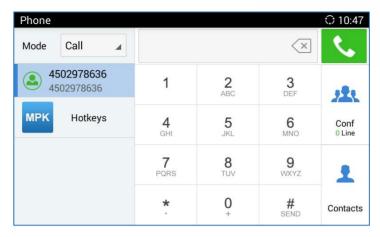


Figure 43: GAC2500 Add Party To Conference

- 4. Enter digits and then tap on to dial out
- 5. Repeat the steps 3-4 to add more parties.



Note:

- You can add multiple members to conference at one time.
- You cannot stay in one single active line once joined conference.

Answering an Incoming Call in Conference

You can specify how your GAC2500 handles incoming calls. Depending on your configuration, your GAC2500 automatically answers a call or prompts you to answer a call manually. Log in GAC2500 web GUI and go to Account->Call Settings and set "Auto-answer" option to "Yes", or go to Settings->Personalized Account->Account and set "Auto-answer" to "Yes" on GAC2500. Once enabled, All

incoming calls will be automatically answered, you can see the icon displayed on the status bar.

During a conference call, when an incoming call is received, the following prompt will be displayed:

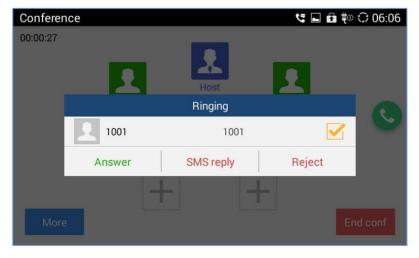


Figure 44: Conference Incoming Call





If the call is answered, it will be added automatically to the conference.

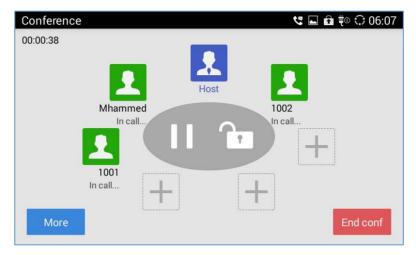


Figure 45: Call Added to Conference

Conference Management

The following figure shows a 3-way conference established.

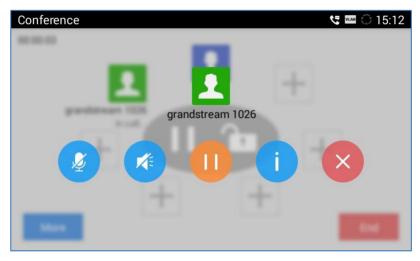


Figure 46: GAC2500 3-Way Conference

Tap on participant icon to bring up more operations.

- Redial. Tap on the icon to dial out again if the call failed.
- Mute. Once enabled, the icon next to the conference member will turn to ..., and the Mute icon

becomes . The selected member will not be heard by other parties. You can tap on to unmute the member.

Block. Once enabled, the icon next to the conference member will turn to , and the Block icon





becomes . The selected member will not hear other members. You can tap on to unblock the member.

- U Hold. Tap to put participant on hold.
- Details. Tap to view conference details, including whether to use SRTP or codec.
- Delete. Tap to delete conference members.

More. Bring up more options including Open DTMF, Mute All, Block All.etc.

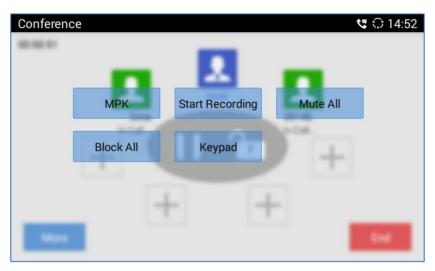


Figure 47: GAC2500 Conference-More

- MPK. Tap to access MPK interface.
- Mute All. Tap to mute/unmute all parties except the host.
- Block All. Tap to block/unblock all parties except the host.
- Start Recording. Tap to start/stop recording. The recording file will be saved automatically.
- **Keypad**. Tap to pen DTMF keyboard.
- Hold. Hold/Unhold conference.
- Lock, Lock/Unlock conference.

End. End conference and go back to home screen.

Invite Members to Conference

Users could use one of the following ways to add members.

- Access the dial screen by clicking on the ADD icon on conference screen. Then enter the number to dial out. Once the member answers the call, it will be connected into the conference automatically.
- Tap on to access the dial screen, then enter the number to dial out. Once the member answers





the call, it will be connected into the conference automatically.

• The member calls the conference number. If the host answers the call, the member will join conference automatically.

Removing Member from Conference

To remove a member from the conference, tap on the member icon and click to delete it.

Third Party Applications

The GAC2500 runs the Android Operating System and therefore offers full access to the hundreds of thousands of Android apps in the Google Play Store, including Skype for Business™, Google Hangouts™ etc. For example, to use third party app Skype for Business™ during the conference:

- 1. Establish a conference call on the GAC2500;
- 2. On conference screen, click on +:
- 3. Input numbers or contacts of Skype for Business™ and dial out;
- 4. The new call will be added to conference.

⚠ Note:

- You should install the third party app and sign in first.
- You should go to Web GUI->Advanced -> Call Features and set Display Soft Keyboard as Yes.
- Some third party apps may not support the GAC2500's dial pad, you have to go to the application's GUI to dial out.
- If you dial SIP numbers and third party apps' numbers at the same time, the SIP numbers will be
 dialed out first and go to the conference room, you need return to the dial pad, and then the third
 party apps' numbers will be dialed out automatically.
- In order to fully use of Skype for Business™ (Lync), you should download it from the GS Market.
 Other versions may not compatible.

End Conference

To end the conference, tap on END button to disconnect. If the GAC2500 is the conference host, ending the conference will disconnect all the members from the conference. If the conference member hangs up the call, it will be disconnected from the conference but other parties in the conference will stay in the conference.

Schedule Conference

Schedule feature allows the user to set a specific time to hold a conference in advance, with conference reminder and members.

Tap on on desktop to access Schedule screen, the schedule page is shown below, including upcoming conferences and conferences that has been held:





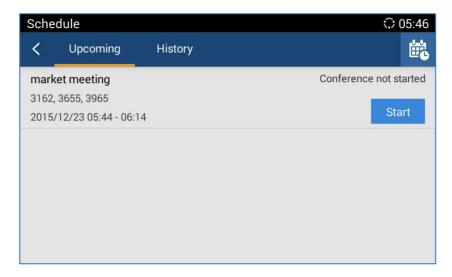


Figure 48: GAC2500 Schedule Screen

View Conference Details

Users could view scheduled conference details after the current time. Select one conference and tap to view conference details. Press on the upper left corner or to exit.

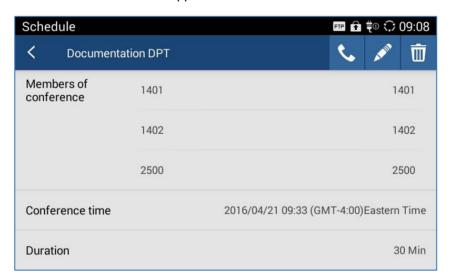


Figure 49: GAC2500 Conference Details Screen

Add Scheduled Conference

Follow the steps below to add a scheduled conference:

- 1. Tap on on desktop to access Schedule screen.
- 2. Tap on in the upper right corner to access "Add Conference" screen as below.





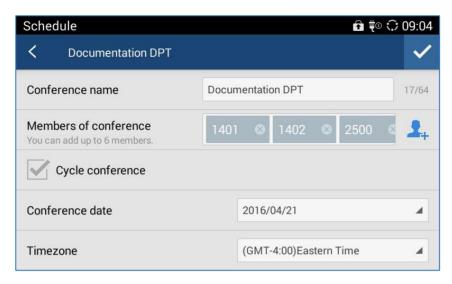


Figure 50: GAC2500 Add Conference Screen

- 3. Fill in conference name, members, start time, conference duration, etc.;
- 4. Tap on to save the scheduled conference and go back to schedule screen.

Table 10: GAC2500 Add Conference Parameters

Parameters	Descriptions
Conference name	Set the conference name to identify this conference.
	Click on button to access the Add Member screen. You can add one member or
Members of conference	a group of members. Tap on on the upper right corner to save and go back to Add Conference screen. Up to 6 members can be added. Note: You can only add up to 6 members.
Cycle conference	Set conference cycle.
Conference date	Configure the date when the conference starts. It should not be earlier than the current date.
Time zone	Configure conference time zone.
Start Time	Configure the time when the conference starts. It should not be earlier than the current time.
Duration (Min)	Configure conference duration.
Reminder time	Configure whether to remind users in advance. A prompt dialog box will pop up on the GAC2500 screen before the conference starts.
Auto conference	Configure whether to initiate conference when the conference time comes. If disabled, a prompt dialog box will pop up on the GAC2500 screen 10 minutes before the conference starts to reminder users whether to start conference.
Auto-answer for conference member	Configure whether to answer the call from the conference member automatically. If the call is not from the conference member, it will not be answered automatically.





Lock	Users could lock/unlock the scheduled conference. Once locked, the other incoming calls will not be able to join conference. The conference screen will display the lock icon when the scheduled conference started, you can also disable this function, please refer to chapter <i>Conference Management</i> for more details.
Auto record	Configure whether to record automatically once the conference started. If enabled, it will record when the conference starts (with active line).
Block when enter	Configure whether to block conference members when they enter conference. If enabled, conference members who auto answered will not hear others unless unblocked by the host.

Schedule Conference via Google Calendar

Access Schedule screen, then tape on 8, the following page is shown:

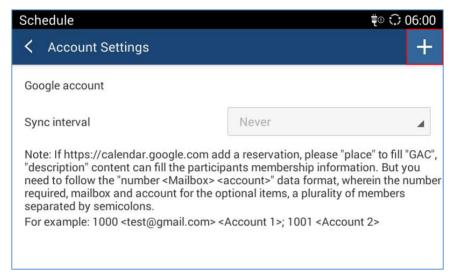


Figure 51: Add Google Schedule

- 1. Click on
- 2. Add an existing or create a new email, and follow instruction.
- 3. Once done the following screen will be shown:





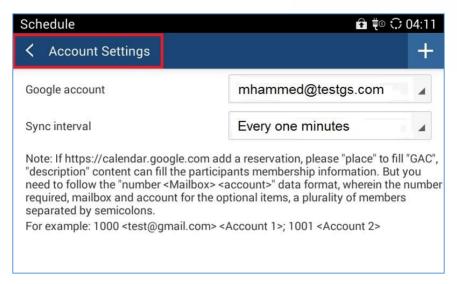


Figure 52: Select Google Account

4. Click on account Settings, then go to the google account and create a new event Then enter conference members in "Description" option. The members should be in the format: Number<Email><Account> "Number" filed is required while the other two fields are optional.

For example: 1000<test@gs.com><1000>;0655443322<gsconf@gs.com>;0655443311

5. After creating the conference go back to the schedule screen and tape on



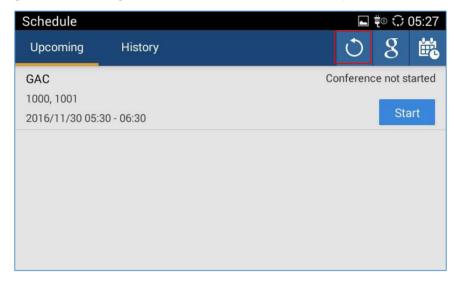


Figure 53: Google Calendar Conference

Edit Scheduled Conference

Follow the steps below to edit scheduled conference:

- 1. Access conference schedule screen and select the conference entry you would like to edit.
- 2. Tap on on the upper right corner to access edit screen.
- 3. Tap on on the upper right corner to save changes and go back to schedule screen.





Reschedule Conference

If you want to reschedule the conference that has been held, please refer to steps in chapter *Edit Scheduled Conference* to edit conference again and save.

Delete Scheduled Conference

Follow the steps below to delete the existing scheduled conference:

- 1. Access Schedule screen;
- 2. Long press the conferences entry to access the edit screen as shown below:

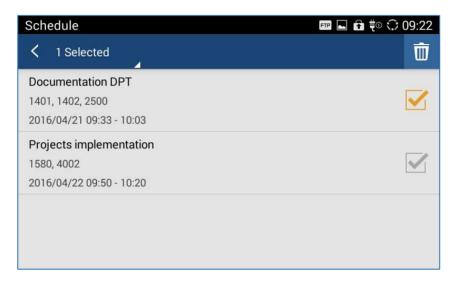


Figure 54: GAC2500 Delete Scheduled Conference Screen

3. Check the conference (s) you want to delete and tap on 🔳 on the upper right corner to delete.

Delete History Conference

You can see all scheduled conferences which has passed the scheduled time in "History" option, you can edit/delete/reschedule the conference here.

There are 2 ways to delete history conference.

- Delete single conference entry.
- 1. Access schedule screen and select the conference entry you would like to delete;
- 2. Slide left on screen as shown below and tap on to delete conference.





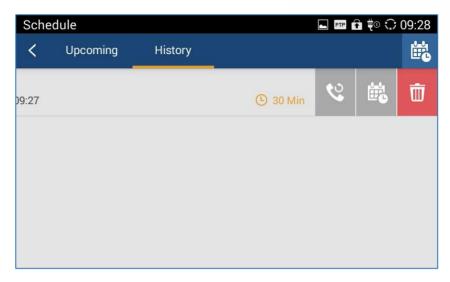


Figure 55: GAC2500 Delete History Conference Screen

- · Batch delete conference entries.
- 1. Access Schedule screen:
- 2. Long press the conferences entry to access the edit screen as shown below:
- 3. Check the conferences you want to delete and tap on on the upper right corner to batch delete conferences.



Note: If you edit a history conference, it will become a new scheduled conference after save.

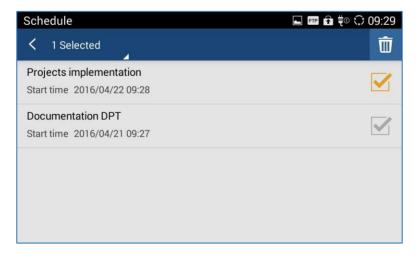


Figure 56: GAC2500 Batch Delete History Conference Screen

Voicemail

When there is a new voicemail, voice mail icon will show up as a notification in the status bar. Users could go to LCD Settings->Advanced settings->Account, or login the web UI->Settings->Account->General





Settings ->Voice Mail UserID to configure the access number for the voicemail. Follow the steps below to access voicemail:

Access the dial screen and input voicemail access number;

Tap on on the dial screen to dial into the voicemail box;

Follow the Interactive Voice Response (IVR) for the message retrieval process.

Users could also tap on to access the voicemail box. The number of new voicemail messages will be shown on the voice mail app icon as well. See figure below.



Figure 57: GAC2500 Voice Mail Application





APPLICATIONS

GAC2500 provides built-in applications such as like Contacts, Call History, File Manager, Browser and etc. Users could also download the apps from GS market to install on the GAC2500.

Contacts

GAC2500 Contacts app helps users to easily store and manage phone number and contact information. Users can add contacts on the GAC2500 or import contacts from external devices as well as download from a server. On the GAC2500 home screen, you can see local Contacts and LDAP Contacts.

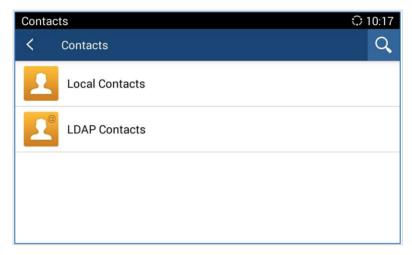


Figure 58: GAC2500 Contacts Screen

Local Contacts

The Local Contacts screen shows as follows:



Figure 59: GAC2500 Local Contacts Screen

- Back. Back to the previous page.
- Contacts. Display all contacts.





- **Groups.** View groups. Select one group to view group details.
- Blacklist. Display blacklist.
- Call. Tap on the contact you would like to call.
- Add Contact. Tap to access New Contact screen. Fill in contact information and save.
- Search Contact. Tap to access Search Contact screen.
- More. Tap on to export/import/download Contacts, view storage status or sort Contacts.
- Contact Details. Select one contact to view contact details.

Add Contact

Add Single Contact

Follow the steps below to add one single contact.

1. On the Contacts screen, tap on the button 🔼 to access New Contact screen;

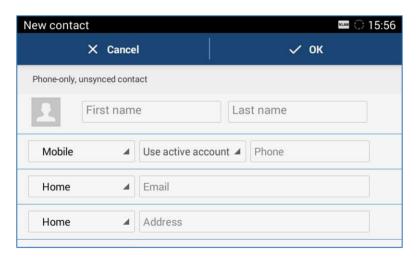


Figure 60: GAC2500 Add New Contact Screen

- 2. Enter contact information. Choose the account on the left of the "Phone" field to dial out this number;
- 3. Click "OK" to save the contact information.

Batch Import Contacts

Import function allows users to batch import contacts. The phonebook with compatible format needs to be saved to the storage devices like SD card/USB flash drive and plugged into the GAC2500.

- 1. On the Contacts screen, tap on the MENU key on Contacts screen and select "Import" to access Import Contacts screen;
- 2. Configure parameters and select the path to save the imported file;
- 3. Click "OK" to save the contact information.





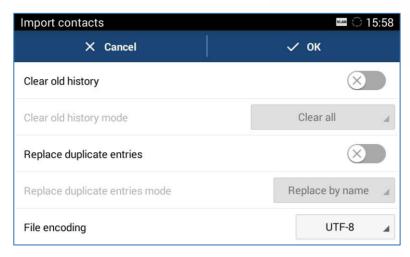


Figure 61: GAC2500 Import Contacts Parameters Screen

Table 11: GAC2500 Import Contacts Parameters

Parameters	Descriptions
Clear old history	If enabled, the previous contact records will be deleted when a new phonebook file is loaded into the phone. If disabled, both the old contacts and new contacts will be kept in the GAC2500.
Clear old history Mode	Configures whether clear all contacts or reserve local contacts when clear old list. The default setting is "Clear All".
Replace duplicate Entries	If enabled, when the phonebook file is imported to the phone, the duplicated entries will be removed. If disabled, both the old contacts and new contacts will be kept in the GAC2500.
Replace duplicate Entries Mode	You can replace duplicate entries by name or number.
File encoding	Select the encoding format for XML contact file.
File type	Select the file format for phonebook file import. The device supports xml, csv and VCard format.
Select file	Select file from storage device plugged into the GAC2500.

Download Contacts

GAC2500 supports downloading phonebook from the file server to batch add contacts. The default file name the GAC2500 looks for is "phonebook.xml". The phonebook XML file should be placed under the file server directory for the GAC2500 to retrieve. The GAC2500 supports VCard/xml/csv file format.

- 1. On the Contacts screen, tap on the MENU key and select "Download" to bring up the Download Contacts screen:
- 2. Configure parameters and select the path to save the file;
- 3. Tap on the "OK" key to save the contact information.





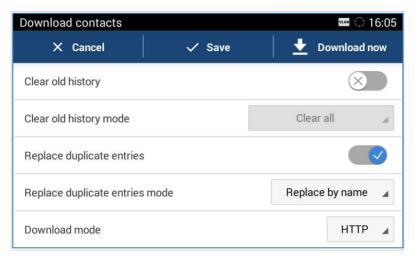


Figure 62: GAC2500 Contacts Screen

Table 12: GAC2500 Download Contacts Parameters

Parameters	Descriptions
Clear old history	If enabled, the previous contact records will be deleted when a new phonebook file is loaded into the phone. If disabled, both the old contacts and new contacts will be kept in the GAC2500.
Clear old history mode	Configures whether clear all contacts or reserve local contacts when clear old list. The default setting is to "Clear All".
Replace duplicate entries	If enabled, when the phonebook file is downloaded to the GAC2500, the duplicated entries will be removed. If disabled, both the old contacts and new contacts will be kept in the GAC2500.
Replace duplicate entries mode	You can replace duplicate entries by name or number.
Download mode	Select the phonebook download mode from TFTP, HTTP or HTTPS.
File encoding	Select the encoding format for the XML contact file.
Time intervals	Configure the time interval to download XML contact file.
Download server	Fill in the server URL or IP address to download the XML contact file to the device.
Username	The username that may be used for download server login
Password	The password that may be used for download server login

Search Contacts

GAC2500 supports Search function, users could tap on icon on the Contacts page and input the keyword to search in the pop-up dialog. GAC2500 will automatically display contacts items related to the search info. Fuzzy search and precise search are both supportive.





Manage Contacts

Delete Contact

- 1. Long press the contact you would like to delete to access edit screen;
- 2. Check the contact, or click the button on the upper left corner of the toolbar for quick operation. "Select All" indicates check all select entries while "Cancel All" indicates uncheck all selected entries;
- 3. The digit on the upper right corner indicates how many contacts you have selected, tap on delete contacts you selected.

Star Contacts

In GAC2500, users can add at most 18 star contacts.

1. Locate a contact from the list, tap on the contact, shown as below.



Figure 63: GAC2500 Contact Edit Page

2. Choose a number to star, and tap the icon on the right. Then the number will be displayed on the top of contacts list.

• Create Contact Short Cut

GAC2500 supports creating a shortcut of a contact to desktop, or to speed dial hotkey.

- 1. In Contacts app, find the contact to create shortcut, tap on the contact to edit the detail.
- 2. Tap on the send icon and choose shortcut mode in the prompt.

Note: When a contact has multiple numbers, choosing "Send to Speed Dial" would create multiple hotkeys in the app.

Export Contacts

The GAC2500 supports exporting phonebook as VCard/xml/csv files and save the files to other external storage devices.





1. Press the MENU key on Contacts screen to bring up the Export contacts screen.

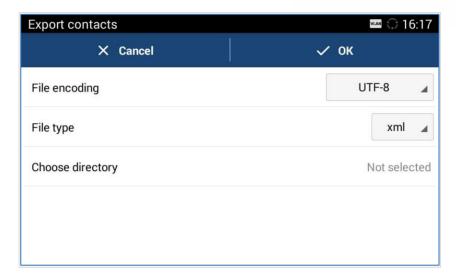


Figure 64: GAC2500 Export Contacts Screen

- 2. Configure parameters as shown in table below and select the directory to save the exported file.
- 3. Tap on the "OK" key to export the file.

Table 13: GAC2500 Export Contacts Parameters

Parameters	Descriptions
File encoding	Select the encoding format for XML contact file.
File type	Select the file format for phonebook file export. The device supports xml, csv ,vcard.
Choose directory	Select directory to save file.

Send Contacts

- 1. Long press the contact you would send to enable edit screen;
- 2. Check the contact you want to send;
- 3. Choose the way to send contact. If Bluetooth Device Chooser has been enabled, users could send the contact to the paired user via the Bluetooth.

• Contacts Storage Status

Tap on the Contacts page to view the contacts storage. You can store up to 2000 entries.





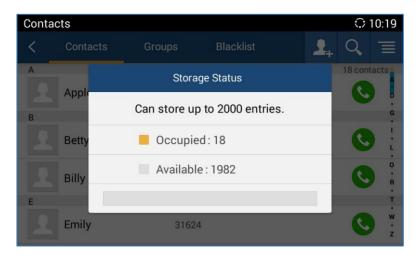


Figure 65: GAC2500 Contacts Storage Status Screen

• Add Google Account

Account allows users to add vast number of 3rd party Android applications (including Google, Lync, Skype, company, Email, and etc.). Users can also sync GAC2500 via Google Play account, corporate account or Email.

Tap "Add Account" button to add new account according to the installation wizard.

The following steps demonstrate how to add a Google account.

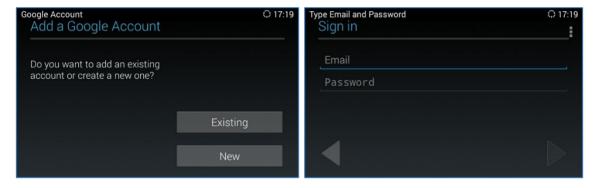


Figure 66: GAC2500 Add Google Account - Wizard 1 &2

Groups

Users could divide contacts into different groups with specific names. Tap on one group entry to view group details.







Figure 67: GAC2500 Groups Screen

Add New Group

There are 2 ways to add group members.

- Add the contact to the group when editing or adding a new contact.
- Select the contact you would to add to this group on Groups page when adding or editing a new group.

Follow the steps below to create a new group:

Tap on the Groups page as shown below;

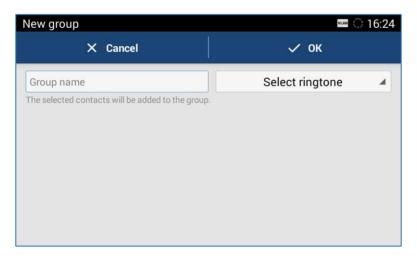


Figure 68: GAC2500 Add Group Screen

Note: The priority of ringtones from high to low is "Custom", "Group", "Account" and "Default". If one group has set the custom ring for its contacts, the phone will ring the custom ringtone other than other group ringtones.





Call Groups

1. Tap on the upper right corner on Groups screen to access screen as shown below:

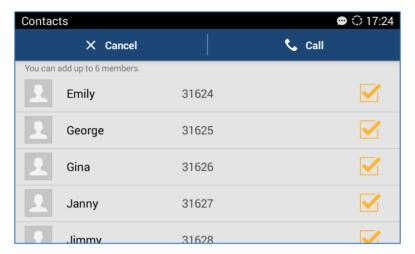


Figure 69: GAC2500 Dial Group Members Screen

- 2. Check group member (s) you want to call;
- 3. Tap on the CALL button to dial out.

• Delete Group

Follow the steps below to delete groups.

1. Long press the group entry you want to delete; the screen is shown below:

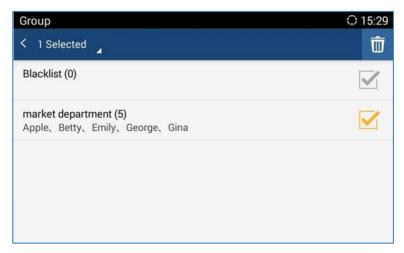


Figure 70: GAC2500 Edit Group Screen

- 2. Check to select the group (s) you would like to delete;
- 3. Tap on 🔳 the upper right corner to delete.





• Create Group Short Cut

GAC2500 supports creating a shortcut of a group to LCD desktop, or to Group Call in hotkeys app.

- 1. In Groups tab under Contact app, tap on one group item to enter edit detail.
- 2. Tap on the send icon to prompt modes to select.
- 3. Check the mode to send and tap "OK".

Note: When choosing "Send to the Group Call (hotkeys)" but the group has more than 6 contacts, please choose at most 6 numbers.

Blacklist

Blacklist helps users to block calls from blacklist at the same time does not affect normally answering other incoming calls.

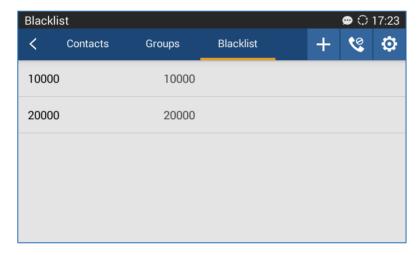


Figure 71: GAC2500 Blacklist Screen

- Display blocks history.
- Tap to add number to blacklist. There are 3 ways to add number: Manually add, add from contacts,

Add from call history. Select one way and tap on "OK" to add the corresponding number to blacklist. Long press one blacklist log to enter the editing mode to edit or delete the selected contact (s). Users could edit the blacklist entry when only one is selected.

Blacklist Settings.





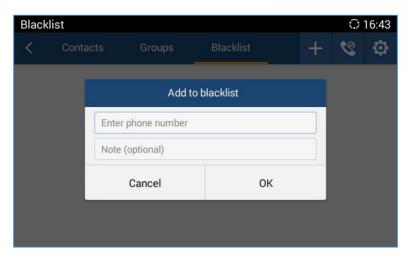


Figure 72: GAC2500 Manual Add Blacklist Screen

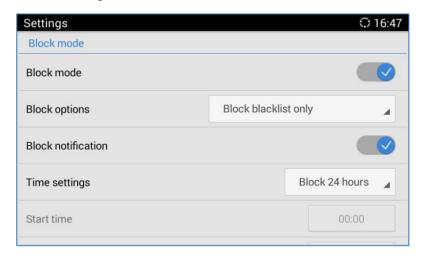


Figure 73: GAC2500 Blacklist Settings Screen

Table 14: GAC2500 Blacklist Settings Parameters

Parameters	Descriptions			
DND mode	Turn on/off DND mode. Once it's turned on, the phone would reject all incoming calls.			
Block mode	Turn on/off Block Mode. Once it's turned on, the incoming calls from the numbers in the blacklist will be rejected.			
Block options	Set the types of incoming calls. This option is valid once the Block Mode is turned on.			
Block notification	Set up whether to notify user after blocked calls. Once it's turned on, the block icon will be displayed in the status bar after the device blocked calls. Users could go to the notification bar to view details.			
Time settings	Set up the block schedule.			





LDAP

GAC2500 supports LDAP. Tap on LDAP Contacts to access the main interface as shown below:



Figure 74: GAC2500 LDAP Book Screen

Tap on the upper right corner or login the Web page to configure it. (Maintenance ->LDAP Book).

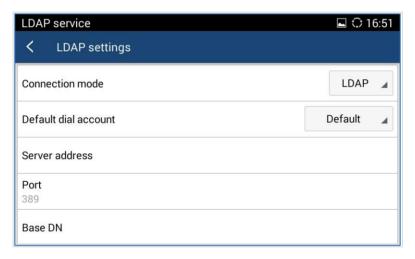


Figure 75: GAC2500 LDAP Settings

Table 15: GAC2500 LDAP Book Parameters

Parameters	Descriptions	
Connection mode	Selects which protocol will be used for LDAP searching, LDAP or LDAPS.	
Default dial account	Specifies default account when making outgoing from LDAP contacts.	
Server address	Configures the URI of the LDAP (Lightweight Directory Access Protocol) server.	
Port	Configures the LDAP server port. The default LDAP port number is 389.	
Base DN	Determines the LDAP search base. This is the location in the directory where the search is requested to begin.	





	Example: dc=grandstream, dc=com ou=Boston, dc=grandstream, dc=com		
User name (binding DN)	Configures the bind "Username" for querying LDAP servers. Some LDAP servers allow anonymous binds in which case the setting can be left blank.		
Password	Specifies the bind "Password" for querying LDAP servers. The field can be left blank if the LDAP server allows anonymous binds.		
LDAP name attributes	Configures the "name" attributes of each record which are returned in the LDAP search result. This field allows the users to configure multiple space separated name attributes. Example: gn cn sn description		
Configures the "number" attributes of each record which are returned the LDAP search result. This field allows the users to configure measurements space separated number attributes. Example: telephoneNumber telephoneNumber Mobile			
LDAP mail attributes	Determines the "mail" attributes of each record which are returned in the LDAP search result. Example: mail		
LDAP name filter	Configures the filter used for name lookups. Examples: ((cn=%)(sn=%)) returns all records which has the "cn" or "sn" field starting with the entered prefix; (!(sn=%)) returns all the records which do not have the "sn" field starting with the entered prefix; (&(cn=%) (telephoneNumber=*)) returns all the records with the "cn" field starting with the entered prefix and "telephoneNumber" field set.		
LDAP number filter	Defines the filter used for number lookups. Examples: ((telephoneNumber=%)(Mobile=%) returns all records which has the "telephoneNumber" or "Mobile" field starting with the entered prefix; (&(telephoneNumber=%) (cn=*)) returns all the records with the "telephoneNumber" field starting with the entered prefix and "cn" field set.		
LDAP mail filter	Determines the filter used for mail lookups. Example: (mail=%) (!(sn=%)) returns all the records which do not have the "sn" field starting with the entered prefix;		





	(&(cn=%) (telephoneNumber=*)) returns all the records with the "cn" field starting with the entered prefix and "telephoneNumber" field set.		
LDAP displaying name attributes	Configures the entry information to be shown on phone's LCD. Up to 3 fields can be displayed. Example: %cn %sn %telephoneNumber		
Max hits	Specifies the maximum number of results to be returned by the LDAP server. If set to 0, server will return all search results. The default setting is 50.		
Search timeout (s)	Configures the interval (in seconds) for the server to process the request and client waits for server to return. The default setting is 30 seconds.		
LDAP lookup when dialing	Sets the phone system to do the LDAP number searching when making outgoing calls. The default setting is "No".		
Search LDAP for incoming call	Sets the phone system to do LDAP number searching for incoming calls. The default setting is "No".		

Once configured, you can tap on Search button to input digits or name to search LDAP contact as shown below.



Figure 76: GAC2500 Web GUI Maintenance - LDAP Book



Add the LDAP contact to local Contacts.

Follow the steps below to batch add LDAP contacts:

- 1. Search LDAP contacts;
- 2. Tap on to access add contact screen as shown below:







Figure 77: GAC2500 Add LDAP Contact To Local

3. Check contacts entries to add contacts to local.

Call History

Call History provides users access to phone's recent call records. The user can view all records, or select different categories for incoming calls, outgoing calls, missed call and conference.

To access Call History, go to Home screen-> Applications->



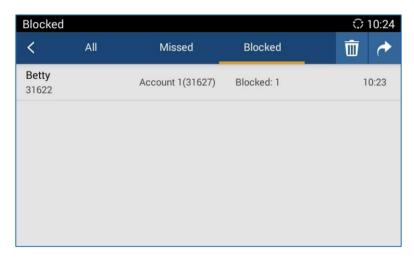


Figure 78: GAC2500 Call History Screen

Click on a record in the call history and press to dial out this number directly. Tap one history entry to view call details for this number.





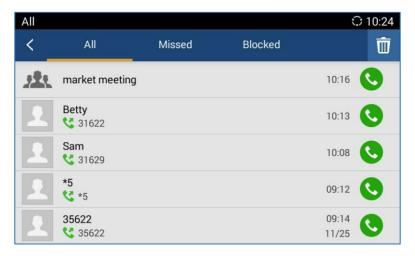


Figure 79: GAC2500 Call History Details

Note: Call history displays all Blue Jeans™ conference call history as well. Tap on to dial out directly and there is no need to input the password again. However, if the conference doesn't exist or the password has been changed, the re-dial will fail.

Call Count Call History

Users can view number of calls made or received from one extension by following these steps:

6. Access Call History

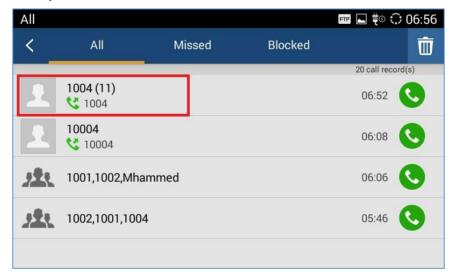


Figure 80: Call History Count

7. Select one call history entry to access details of the call.





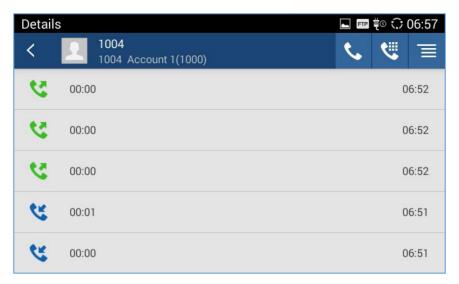


Figure 81: Call History Count Details

Add Contact from Call History

- 1. Access Call History screen;
- 2. Select one call history entry to access details screen;
- 3. Tap on the upper right corner and select "View contact" to access "Add a contact" screen;

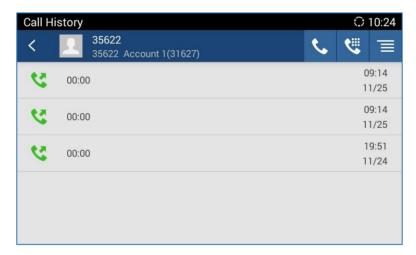


Figure 82: GAC2500 Add Contact Screen

- 4. Tap on "Create new contact" to add new contact information.
- Confirm to add contacts.

Delete Call History

- 1. Long press the call history entry you want to delete to access editing mode;
- 2. Check the entry and tap on 🗓, click "OK" to delete.

Schedule Conference Via Call History

1. Select one call history entry you would like to add to scheduled conference;





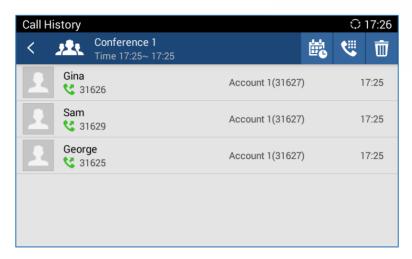


Figure 83: GAC2500 Conference Call History Screen

- 2. Tap on the upper right corner to access schedule screen;
- 3. Fill in information and tap on to save

Note: If the conference members are more than 6 people, you will enter the members select screen to check members first.

Intercepted History

When the incoming call is from contact in blacklist, the GAC2500 will reject it automatically. The screen is as shown below.

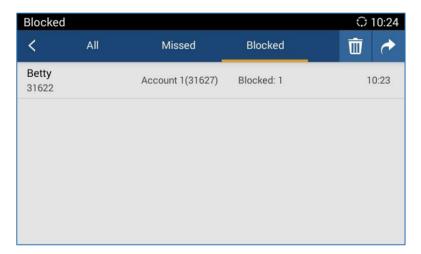


Figure 84: GAC2500 Intercepted History Screen

- Empty intercepted history.
- Restore to be the contact.





Hotkeys(MPK)

User could login the Web page and go to Advanced->MPK LCD Settings or go to LCD menu->Hotkeys to configure it.

- 1. Open Hotkeys app from LCD menu, tap on the upper right corner to access Number List page.
 - Tap on to add number.
- 2. Users could also tap on to add number directly from Contacts. See figure below.

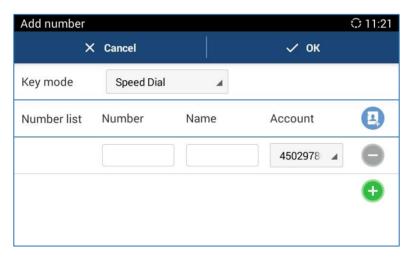


Figure 85: GAC2500 Add MPK Number

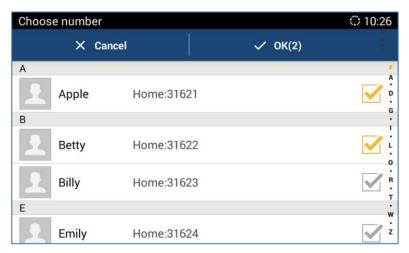


Figure 86: GAC2500 Add Number from Contacts

3. The MPK screen is shown in figure 76 after adding numbers.





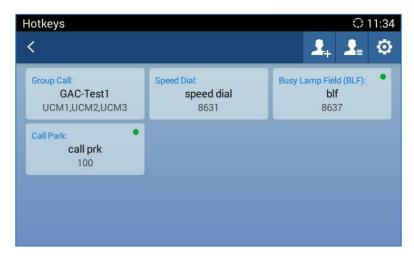


Figure 87: GAC2500 MPK Number Screen

Event list

The Event List URI in MPK list, it requires server support. Users should firstly configure an Event List URI including expanded list on the server (e.g.: <u>BLF1006@myserver.com</u>) and fill in URI without a domain name (e.g.: <u>BLF1006</u>).

- 1. Open MPK, tap on 2 on the upper right corner and select Event list as key mode.
- 2. Fill in information and save.

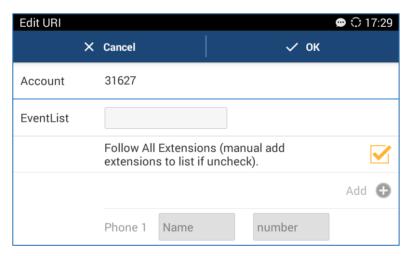


Figure 88: GAC2500 MPK URI Screen

MPK List

Open Hotkeys(MPK), select on the up right corner to enter MPK list, shown as below.





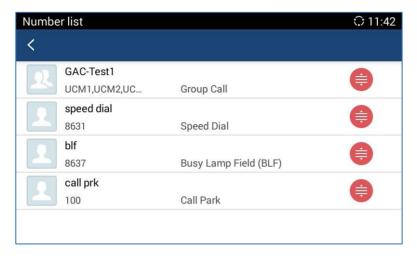


Figure 89: GAC2500 MPK List

Users can edit, order or delete the hotkeys in the list.

Edit: Click on an item to enter the edit page.

Order: Hold the on the right and move the item to reorder.

Delete: Hold the item to enter selection page, then check one or more items to delete

MPK Settings

Tap on the upper right corner on MPK screen to access Settings screen as shown below:

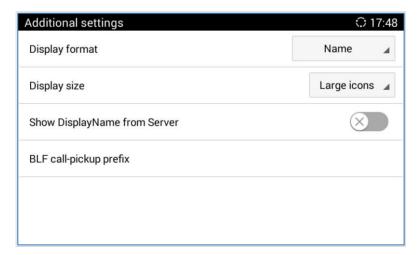


Figure 90: GAC2500 MPK Settings Screen

Table 16: GAC2500 MOK Settings Parameters

Parameters	Descriptions	
Display format	Configures the display format for the MPK. The default setting is "Name".	
Display size	Configures the display size for the MPK. The default setting is "large icons".	





Show Display	If selected, the display name on the server will replace the name users configured.		
Name from server	The default is "No".		
BLF call-pickup	If configured, the phone will add the prefix each time using MPK button to answer the		
prefix	call. The default setting of each account is "**".		

Notices

Users could receive SIP messages and set up reject calls in Notices function. The Notices page is as shown below:

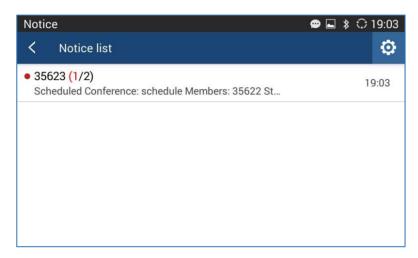


Figure 91: GAC2500 Notices Screen

View Notices

The Notices page displays notices list, the notices are classified by contacts name or phone number and sorted by the time when you received notices. Tap on one notice entry to view details.

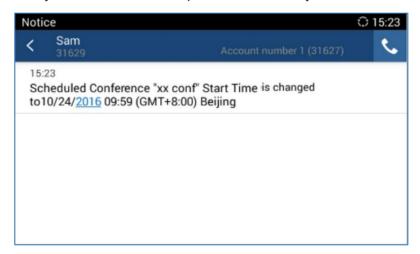


Figure 92: GAC2500 View Notices

Delete Notices

Long press one notice entry to access edit screen;





2. Check the notice (s) you want to delete and tap on to delete.

Notices Settings

If enable "Allow Reminder", a warning will be sounded and you'll see notification on the status bar when receiving a notice; If enable "Quick Reply", a quick reply will be sent when the incoming call is rejected.

1. Tap on the upper right corner on Notices page to access Settings screen;

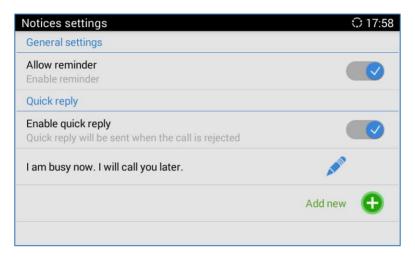


Figure 93: GAC2500 Notices Settings Screen

- 2. Enable quick reply and add reply content;
- 3. When there is an incoming call, the screen is as shown below:



Figure 94: GAC2500 Incoming Call Screen

- 4. Tap on "SMS Reply";
- 5. Select one reply to send, the call will be rejected and the caller will receive the message.

File Manager

File Manager allows users to delete, move, copy, paste, send, rename files (including files on storage device such as USB flash drive), and query file properties on the GAC2500.





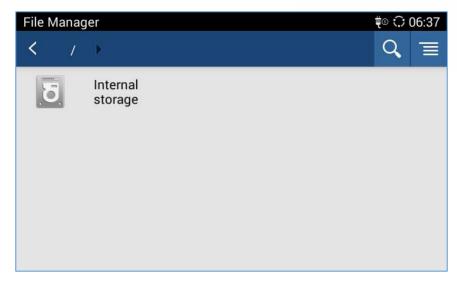


Figure 95: File Manager

Copy File

To copy the file from the GAC2500 to USB storage device:

- 1. Insert USB/SD storage device into USB port on the GAC2500. It will take a few seconds for the GAC2500 to prepare the connection:
- 2. The USB storage icon will show on the status bar;
- 3. Go to Home screen, find the application File Manager;
- 4. Open the target folder;
- 5. Long press the file to select;
- 6. Tap on the upper right corner to copy file and press to go back to the upper level directory;
- 7. Select target storage device and go to the directory where the file will be pasted to paste the file.

Send File

The first 5 steps are the same as the ones in Copy File.

- Tap on the upper right corner select "Send" option;
- 2. Select target location and confirm to send file.

Note: If the user needs to send the file via Bluetooth, enable and connect Bluetooth device first. Otherwise, the interface will be redirected to the corresponding setting page to configure.

Delete File

The first 5 steps are the same as the ones in Copy File.

- 1. Tap on the upper right corner, a dialog will pop up for users to confirm whether to delete the file or not.
- 2. Press the "OK" key to delete the file successfully.





Rename File

- 1. Go to Home screen, find the application File Manager.
- 2. Open the target folder and long press the file.
- 3. Press MENU key on the upper right corner and select "Rename".
- 4. Input the new file name in the pop-up dialog and press the "OK" key to save, tap on "Cancel" or press



Recorder

Users could record conference, institution and personal notes via GAC2500 Recorder conveniently. There is no time limit to recording time and the larger the available storage capacity is, the longer the recording time is. Users could also find the recording file from a call in the recorder and listen to it.

Long press the recording files to access editing interface, tap on the MENU key to make other operations to recording files like export, rename, and lock/unlock.

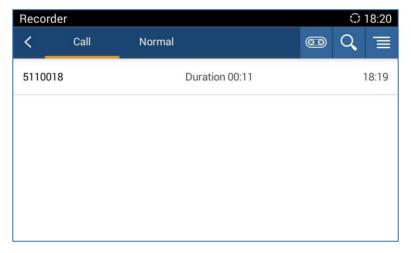


Figure 96: GAC2500 Recorder Main Screen

Note: If the USB storage is where recordings are written, the recording capacity depends on the USB storage space.

Normal Recorder

- 1. Tap on the upper right corner to access recording interface, Tap on to start recording;
- 2. Click "Save" to save the record file, click "Cancel" will bring out the dialog for users to confirm whether to save the file or not and to stop recording;





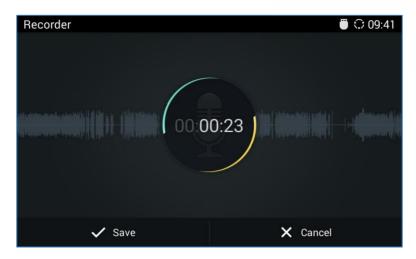


Figure 97: GAC2500 Normal Record - Recording

3. Go back to the Recorder page, select one recording file and click on the right of the progress bar to play the file.

Call Recorder

In the process of an active call, the recording file will be saved on the phone. Users can only listen to it via Recorder.

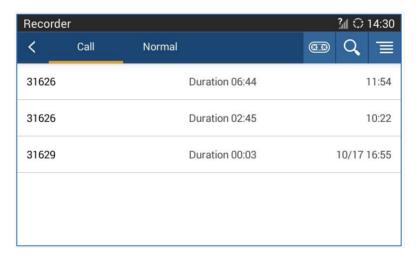


Figure 98 GAC2500 Call Recordings

Recorder Settings

Tap on the upper right corner on Recorder screen to sort the recording files, or access the recording setting screen as shown below:





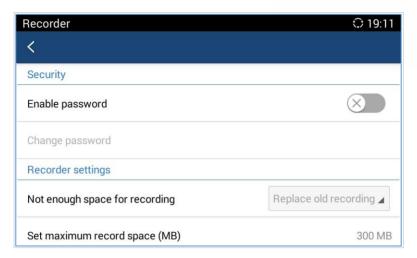


Figure 99: GAC2500 Recorder Settings Screen

- Enable password. Enable and set password. Once set the password, input the password to access Recorder.
- Change password. To change password, please enable "Enable Password" option first.
- Set store location. When a USB disk is detected, you can set the recorder stored in the USB disk.
- Not enough space for recording. Set "Replace Old Recording" or "Stop and Save" when there is no
 enough space for recording.
- Set maximum record space (MB). Set the maximum recording space on the device, you cannot view recording files via File Manager.
- Set export location. It can be an SD card or external export device.

Sound

User could set silent mode, increase GAC volume, Select Ring Tones and notification tones as well as selecting different voice mode from LCD under "Settings > Sound".

Diagnosis

Users could make operation like LCD Diagnosis, Keypad Diagnosis, and LED Diagnosis on GAC2500 via built-in Diagnosis app

Browser

Users could browse webpage, view news and watch video via the built-in GAC2500 Browser. Press on



in the main menu to open Browser.

- Slide up and down with slide gesture to scroll the screen.
- Zoom in/out the page via zoom gesture.
- Press the menu button
 on the upper right corner to open the menu bar for more operations.





GS Market

GAC2500 provides direct access to apps via built-in GS market app. Users could download the apps from the market and install to the GAC2500.

Search Apps

In the GAC2500 Home screen, click on Applications->GS Market . The users could view the apps by category, or input key words and click on to search.

Download and Install Apps

- Users could see if the app has been installed or downloaded by pressing the blue shortcut key.
- Press MENU key to view the downloaded apps and installed apps.
- Tap on to cancel download in process.
- Tap on to try again if the download failed.
- The installing process will be automatically started after downloading the app.
- Go to Installed screen to view the installed apps, or tap on to uninstall the downloaded apps.

Update Apps

The GAC2500 will automatically detect if there is new version available for the installed apps to upgrade when the network connection is normal. User can view the relevant information and update apps on the Installed screen.

FTP Server

The GAC2500 supports file transferring via FTP Server app.

- Go to LCD menu and tap on
- Tap on Start FTP server to start the server.
- Go to PC browser and type in the address on LCD to manage the files from PC.







Figure 100: GAC2500 FTP Server Connection

You can change the settings of FTP server before file transfer. Tap on the on up right to open FTP server settings. From here, user can set username and password to login, port number and directory to access.

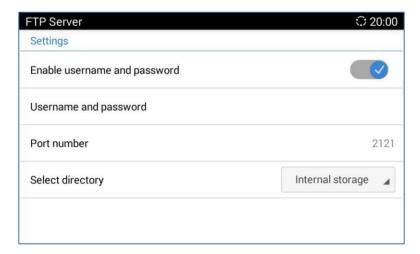


Figure 101: GAC2500 FTP Server Settings

User Helper

For the first time it powers up or after factory reset, GAC will open User helper and tips. Users can follow the guide to use GAC2500.







Figure 102: GAC2500 Quick User Guide





GAC2500 WEB UI FEATURES

Accessing GAC2500 Web GUI

The IP address of the GAC2500 displays on LCD display screen.

To access the GAC2500 Web GUI:

- 1. Connect the computer to the same network as GAC2500.
- 2. Open a Web browser on your computer, enter the phone's IP address in the address bar of the browser; for example: http://192.168.124.111;
- 3. Enter the administrator's login and password to access the Web Configuration Menu. The default username and password are: admin, admin; you can set language to English or Chinese in the drop-down menu of language;



Figure 103: GAC2500 Web GUI - Login

4. Click "Login" to access the configurations in web UI.

Saving Changes

When changing any settings on the web UI, always submit them by pressing the SAVE button on the bottom of the page, and then clicking the Apply button on the top of the page to apply the configuration changes. For those options with next to it in the Web page, users must reboot the GAC2500 for the changes to take effect.

Definitions

This section describes the 6 options in the GAC2500 Web GUI. Please view Advanced, Maintenance and Status specifications in Administration Guide.

- Call: Users could start conference and control conference from Web GUI.
- Contacts: Contacts, Schedule, Call History.
- Account: Configure account info.
- Advanced: General Settings, Call Features, Tone Generator, MPK General Settings, MPK LCD Settings.
- Maintenance: Network Settings, Time & Language, Security Settings, Upgrade, Troubleshooting,





Device Manager.

• Status: Account Status, Network Status, System Info.

You can log in as an administrator or a normal user. The following table shows the web pages accessible by normal user and administrator.

Table 17: GAC2500 Users Access Permissions

User Type	Username	Default Password	Accessible Web Pages
Normal User	user	123	 Call Contacts Account: Call Settings Advanced: MPK General Settings, MPK LCD Settings Maintenance: Network Settings, Time & Language, Security Settings, Device Manager Status: Account Status, Network Status, System Info
Administrator	admin	admin	All pages

Toolbar

The web UI tool bar is on the upper right corner of the web UI page.




Figure 104: GAC2500 Web UI Tool Bar

- DND: Turn on/off DND mode. Once enabled, the DND text will turn into red and all incoming calls will be rejected.
- English: Select the display language for the web UI.
- **Reboot:** Reboot the device.
- **Expert:** Click to switch to expert mode and click again to cancel. Once enabled, the administrator can view all settings items.
- Logout: Log out from the web UI.

Call Page

GAC2500 Web UI call page is shown below. Users could make calls and initiate conference from Web UI.





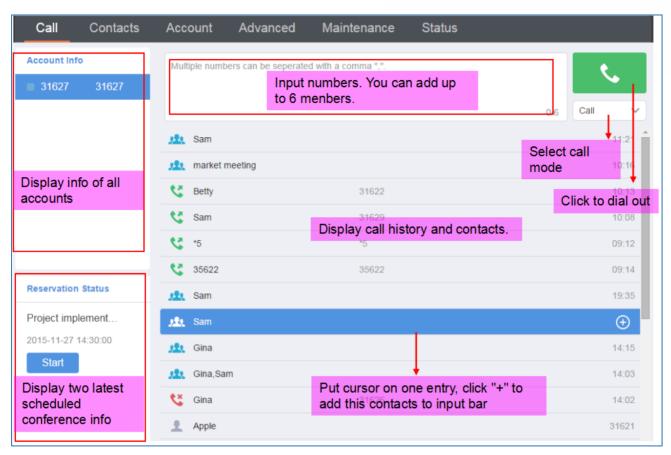


Figure 105: GAC2500 Web UI - Call

Making A Call

- 1. Select account in Account Info box;
- 2. Select call mode, then input phone number (s) in input box, use "," to separate different numbers or tap on other place on screen to confirm your input;
- 3. Tap on to dial out.

You can also tap on behind one call history entry to add the contact to input box.

Single Incoming Call

When the GAC is in idle, the dial screen will pop up when dialing out as shown below:





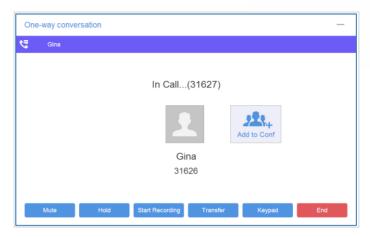


Figure 106: GAC2500 Web UI - Single Incoming Call

If the callee answers the call, you will see dial screen which is the same as the one on GAC2500 LCD.

Tap on — on the upper right corner to minimize dial screen to the lower right corner as shown below:

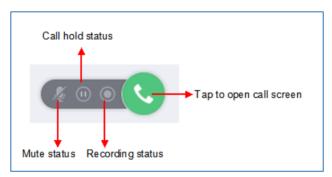


Figure 107: GAC2500 Web UI - Minimize Call Screen

When the line is in mute/hold/recording status, the corresponding icons will be highlighted.

Conference Control

When the GAC2500 is on conference, the conference screen is as shown below.



Figure 108: GAC2500 Web UI - Conference Control





The conference screen on Web is the same as the one on GAC2500 LCD.

Tap on ___ the upper right corner to minimize conference screen to the lower right corner as shown below:

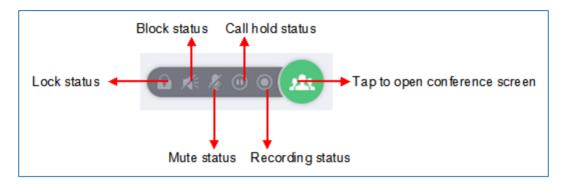


Figure 109: GAC2500 Web UI - Minimize Conference Screen

When the line is in lock/mute all/block all/hold/recording status, the corresponding icons will be highlighted.

Contacts Page

This page lists Contacts, Schedule, Call History and LADP.

Contacts

The operations will be synchronized and can be viewed from LCD as well. Users could search/add/delete/edit contact on web page. The web UI contacts page is as shown below.

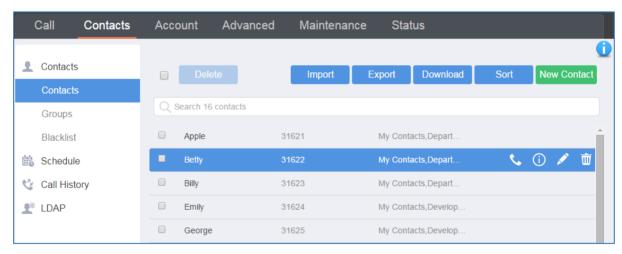


Figure 110: GAC2500 Web UI - Contacts

- Tap on "Import" option to access Import screen. Refer to chapter **BATCH IMPORT CONTACTS** to fill in info and import the contacts on PC to device.
- Tap on "Export" option to access Export screen. Refer to chapter EXPORT CONTACTS to fill in info
 and export the contacts on device to PC.
- Tap on "Download" option to access Download screen. Refer to chapter **DOWNLOAD CONTACTS** to fill in info and download the contacts on server to PC.
- Tap on "Sort" option to access Sort Phonebook screen. Sort the contacts by first name or last name.





- Tap on "New Contact" option to access Add Contact screen. Fill in contact information and save. Put the cursor on contact to display more operation buttons.
- Tap to dial this contact.
- Tap to view the contact details.
- Tap to access Edit screen, you can edit contact and save the changes.
- Tap to delete this contact.

Groups

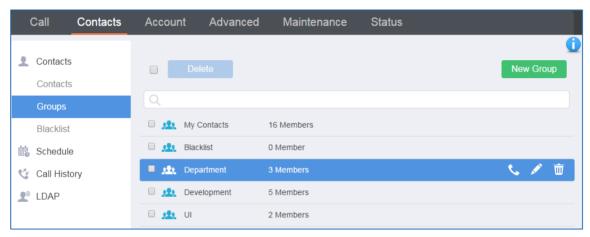


Figure 111: GAC2500 Web UI - Groups

- Tap on "New Contact" option to access New Group screen. Input group name and check group member (s) then save.
- Click on the group name to view all members in this group.

Put the cursor on group to display more operation buttons.

- Tap to call this group. Please note that GAC2500 supports up to 6 lines (7-way) conference. If there are more than 6 conference members, check 6 members you want to add to conference first.
- Tap to access Edit screen, you can edit group and save the changes.
- Tap to delete this group, the contacts in this group will not be deleted the same time.

Blacklist

Blacklist function on Web UI is the same as on local. Please refer to chapter *Blacklist* for more details.





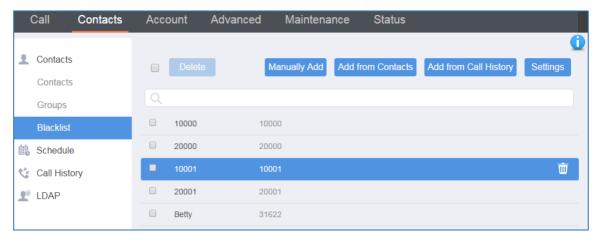


Figure 112: GAC2500 Web Page - Blacklist

Schedule

You can refer to chapter Schedule for more details.

• Upcoming Conference

Conference can be scheduled, edited and deleted from web UI.


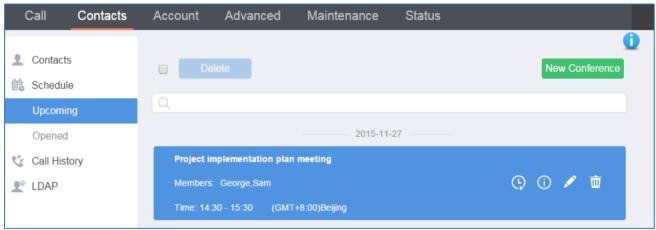


Figure 113: GAC2500 Web Page - Upcoming Conference

Tap on "New Conference" option to access New Conference screen. Input conference name and check conference member (s) then save.

Put the cursor on conference to display more operation buttons.



- Tap to access Details screen. You can also edit and save conference on this screen.
- Tap to access Edit Schedule screen, you can edit conference and save the changes.
- Tap to delete this conference.





• History Conference

History conference screen is as shown below, you can dial/reschedule/delete history conference from web UI.

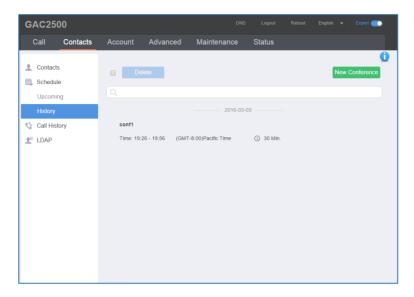


Figure 114: GAC2500 Web Page - History Conference

Put the cursor on conference to display more operation buttons.

- Tap to call this conference.
- Tap to access Details screen. You can also edit and save conference on this screen.
- Tap to access Edit Schedule screen. You can reschedule the history conference on this screen.
- Tap to delete this conference.

Call History

From web UI, users could also access Call history, which is synchronized with the call history from LCD.


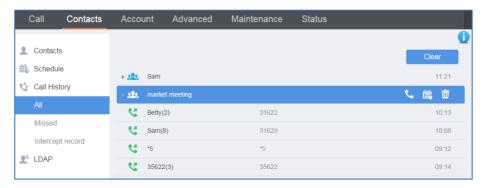



Figure 115: GAC2500 Web UI - Call History





Tap on "Clear" option to clear all call history.
 Put the cursor on call history to display more operation buttons.







LDAP

From web UI, users can configure LDAP contacts. Please refer to chapter of **LDAP** under Application to fill in info and import LDAP contacts.





FACTORY RESET

Users could reset factory settings via the following ways: Reset via local GUI, via Web page, via the reset button on the back panel of GAC2500. Factory reset will delete configuration info and syslog info, the HDD data and videos will not be deleted.

Warning: Restoring the Factory Default Settings will delete all configuration information on the phone. Please backup or print all the settings before you restore to the factory default settings. Grandstream is not responsible for restoring lost parameters and cannot connect your device to your VoIP service provider.

Restore to Factory Default Via LCD Menu

Access to the GAC2500 LCD Settings->Advanced Settings->Factory Reset, tap on Factory Reset, a confirmation message will be displayed. Tap on **OK** to confirm or return to avoid.



Figure 116: Factory reset

Restore to Factory Default Via the Web GUI

- 1. Access to the GAC2500 Web GUI -> Maintenance->Upgrade page;
- 2. At the bottom of the page, click on the **Reset** button for Factory reset. Select whether you would like to clear the SD card if there is SD card plugged in.




Figure 117: Factory Reset on Web UI

3. A dialog box will pop up to confirm factory reset;





Factory reset will erase all your settings and will reboot the device, are you sure to continue?

OK Cancel

Figure 118: Web UI - Factory Reset Confirmation

4. Click **OK** to restore the phone to factory settings.

Reset Via Button

Use a small pin to press the button Reset button on the back panel of GAC2500 for more than 10 seconds to reboot and restore to factory reset.





EXPERIENCING THE GAC2500 APPLICATION PHONE

Please visit our website: http://www.grandstream.com to receive the most up- to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our <u>product related documentation</u>, <u>FAQs</u> and <u>User and Developer Forum</u> for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or <u>submit a trouble ticket online</u> to receive in-depth support.

Thank you again for purchasing Grandstream Enterprise Application phone, it will be sure to bring convenience and color to both your business and personal life.



^{*} Android is a trademark of Google Inc.

^{*} Skype and Lync are Registered Trademarks of Microsoft Corporation.